XR-C102

SERVICE MANUAL

German Model

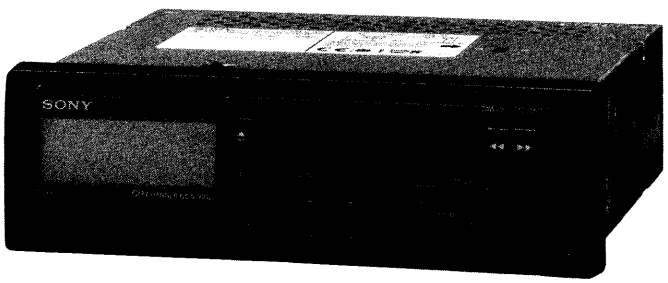

Model Name Using Similar Mechanism	XR-3501MK2
Tape Transport Mechanism Type	MG-36SZ7-32

SPECIFICATIONS

Cassette player section

Tape track	4-track 2-channel stereo
Wow and flutter	0.13 % (WRMS)
Frequency response	30 – 15,000 Hz
Signal-to- noise ratio	55 dB

Tuner section

FM

Tuning range	87.5 – 108.0 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	12 dBf (75 ohms)
Selectivity	70 dB at 400 kHz
Signal-to-noise ratio	63 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	
	0.5% (stereo), 0.4% (mono)
Separation	28 dB at 1 kHz
Frequency response	30 – 15,000 Hz
Capture ratio	5 dB

AM

Tuning range	531 – 1,602 kHz
Antenna terminal	External antenna connector
Intermediate frequency	450 kHz
Sensitivity	35 µV

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	20 W × 4 (at 4 ohms)

General

Output lead	Power antenna relay control lead Power amplifier control lead
Tone controls	Bass ±8 dB at 100 Hz Treble ±8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 × 58 × 170 mm (w/h/d) not incl. projecting parts and controls
Mounting dimension	Approx. 182 × 53 × 153 mm (w/h/d) not incl. projecting parts and controls
Mass	Approx. 1.3 kg
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)

Design and specifications are subject to change without notice.

FM/AM CASSETTE CAR STEREO

SONY®

TABLE OF CONTENTS

1. GENERAL

Button Locations 3
Setting the Clock 3
Cassette Player Operation 3
Radio Reception 4
Traffic Anouncement Reception 5
Other Functions 5
CD Changer Operation 5
Maintenance 6
Connections 7

2. DISASSEMBLY

2-1. Cover 9
2-2. Lock Assy 9
2-3. MD Block 10
2-4. Heat Sink 10
2-5. Main Board 11

3. MECHANICAL ADJUSTMENTS 12

4. ELECTRICAL ADJUSTMENTS

Deck Section 12
Tuner Section 13

5. DIAGRAMS

5-1. IC Pin Description 18
5-2. Printed Wiring Boards 20
5-3. Schematic Diagram 23

6. EXPLODED VIEWS

6-1. Chassis Section 28
6-2. Front Panel Section 29
6-3. Mechanism Section (1) 30
6-4. Mechanism Section (2) 31

7. ELECTRICAL PARTS LIST 32

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Button Locations

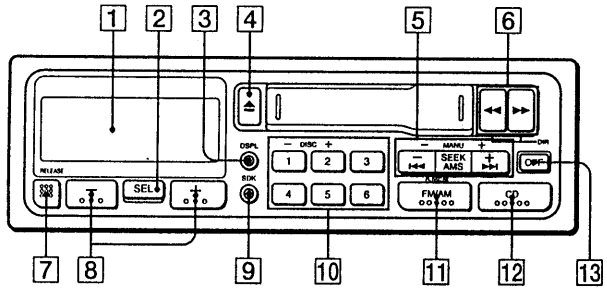

EN

Refer to the pages in ● for details.

1 Display window
2 SEL (control mode select) button ❺❾
3 DSPL (display mode change/time set) button ❺
4 ⏏ (eject) button ❻
5 SEEK/AMS/MANU button ❻❼❽❾
6 ◀◀ • ▶▶ (fast winding)/DIR (tape transport direction change) buttons ❺❻
7 RELEASE (front panel release) button ❹❿
8 (bass/treble/balance/fader control/volume) buttons ❺❾
9 SDK (traffic announcement) button ❽
10 During radio reception: Preset number buttons ❼
During CD playback: (changing discs) buttons ❿
11 FM/AM/A.MEM (radio on • band select/automatic memory) button ❺❻❼
12 CD (disc play/CD changer select) button ❾❿
13 OFF button ❹

Setting the Clock

The clock has a 24-hour digital indication.

For example, setting it to 10:08

1 Press the button to turn on the unit.

2 Display the time.
(Press the DSPL button during unit operation.)

3 Press the DSPL button for more than two seconds.



The hour digit blinks.

Set the hour digits.



(to go back) (to go forward)



4 Press the SEL button momentarily.

The minute digit blinks.

Set the minute digits.



(to go back) (to go forward)

5 Press the DSPL button momentarily.



The clock activates.

Note

The clock cannot be set unless the power is turned on. Set the clock after you turn on the radio, or during tape playback.

Cassette Player Operation

Listening to Tape Playback

After inserting the cassette, playback will start automatically.

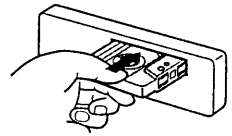

To change the tape direction, press both the ◀◀ and the ▶▶ buttons at the same time.

Indication of Tape Transport Direction



The side facing up is being played.



The side facing down is being played.

Tape playback automatically changes direction at the end of the tape.

Note

Before turning off the unit, eject the tape to avoid tape damage.

Ejecting the Cassette

Press the ⏏ button to stop playback and eject the cassette.

This section is extracted from instruction manual.

Fast-winding the Tape

Direction indicator*	To advance	To rewind
►		
◄		

To resume playback, press the other fast-winding button partially until the locked button is released.

* *The ◄ or ► indicator flashes while fast-winding the tape.*

EN

Radio Reception

Searching for Stations Automatically

— Automatic Tuning

1 Select the desired band.



FM I → FM II → AM → FM I

2 Press either side of the SEEK/AMS/MANU button momentarily to search for the next station (automatic tuning).



For lower frequencies



For higher frequencies

The scanning stops when a station is received. Press either side of the button repeatedly until the desired station is received.

When an FM stereo program with a sufficient signal strength is tuned in,



the "ST" indication appears.

Tuning in by Adjusting the Frequency — Manual Tuning

1 Select the desired band.



FM I → FM II → AM → FM I

2 Press and hold either side of the SEEK/AMS/MANU button.
Release the button when the desired station is received.



For lower frequencies



For higher frequencies

PREVENT ACCIDENTS!
When tuning in during driving, use the automatic tuning and the memory preset tuning instead of the manual tuning.

Memorizing Stations Automatically

— Automatic Memory Function

Stations with the clearest reception are automatically searched and memorized on each band (FM I, FM II and AM). Up to 6 stations on each band can be stored on the preset number buttons 1 to 6 in the order of band frequency.

1 Select the desired band.



FM I → FM II → AM → FM I

2 Press the FM/AM/A.MEM button for more than two seconds.

The unit starts scanning the selected band and memorize the tuned stations on the preset number button 1 through 6 automatically.

Memorizing Only the Desired Stations

1 Select the desired band.

FM I → FM II → AM → FM I

2 Tune in the station which you wish to store on the preset number button.

3 Press and hold the desired preset number button (1 to 6) for about two seconds.

The number of the pressed preset number button appears on the display.



Up to 6 stations on each band (FM I, FM II and AM) can be stored on the preset number buttons in the order of your choice. Therefore, 12 stations can be memorized on FM. If you try to store another station on the same preset number button, the previously stored station is erased.

Receiving the Memorized Stations

1 Select the desired band.

FM I → FM II → AM → FM I

2 Press momentarily the preset number button on which the desired station is stored.

Note
If you press the preset number button for more than two seconds, the currently received station is memorized. To receive the previously memorized station, make sure that the preset number button is pressed only momentarily.

EN

Traffic Announcement Reception

Receiving Traffic Announcements

Press the ◎ button. → "SDK" appears on the display.
The unit searches for a traffic information station.
When the station is tuned in, "SK" appears.

When a traffic announcement starts → "SDK" flashes.
The reception of the traffic announcement overrides the current radio broadcast or tape playback. When the announcement is over, the interrupted radio reception or tape playback is resumed.

To stop receiving the traffic announcements, press the ◎ button again.

Notes

- *While the station is broadcasting a traffic announcement (with "SDK" flashing), the SEEK/AMS/MANU, FM/AM/A.MEM and preset number buttons are not operational.*
- *During AM reception, the SDK function does not work; if you press the SDK button, the unit automatically switches to FM 1.*

Searching for another Traffic Information Station

Press either side of the SEEK/AMS/MANU button while "SDK" lights up.



For lower frequencies



For higher frequencies

Presetting the volume of traffic announcements

You can preset the volume level of the traffic announcements beforehand so you won't miss the announcement. When a traffic announcement starts, the volume is automatically adjusted to the preset level.

1 **Select the desired volume level.**

2 **Press the ◎ button for two seconds when "SDK" lights up.**
"SDK" flashes and the setting is stored.

Other Functions

Adjusting the Sound Characteristics

1 **Select the item you want to adjust by pressing the SEL button repeatedly.**

BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader) → VOL (volume) → BAS (bass)

2 **Adjust the selected item by pressing either the – or + button.**

Adjust within three seconds after selecting. (After three seconds the button will again serves as the volume control button.)

Enjoying Bass and Treble at Low Volume

— Loudness Function

Press the SEL button for more than two seconds. → "LOUD" appears on the display.
Bass and treble are boosted. To cancel, press again.

CD Changer Operation

With the optional CD changer(s) connected

Playing a CD

Press the CD button.
CD playback starts.

Locating the Beginnings of the Tracks

— AMS (Automatic Music Sensor) Function

During playback, press either side of the SEEK/AMS/MANU button the number of times you wish to skip the tracks.



To locate the previous tracks



To locate the succeeding tracks

Locating the Desired Part of a Track —Manual Search

During playback, press and hold either side of the SEEK/AMS/MANU button.
Release the button when you have found the desired part.



To reverse



To forward

Changing CDs

During playback, press either the − 1 or + 2 button momentarily.

To return to the previous disc

To advance to the next disc

Selecting CD Changers

(with two CD changers connected)

Press the CD button during CD playback.

Each time you press, another CD changer is selected.

CD I ⟷ CD II

EN

Maintenance

Fuse Replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

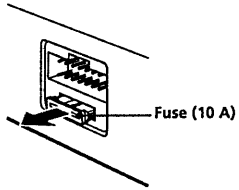

Warning

Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

Cleaning the Connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, open the front panel by pressing the RELEASE button, then detach it and clean with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connector may get damaged.

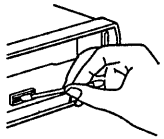

Main unit



Back of the front panel

Dismounting the Unit

1

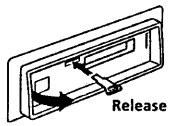

Release key (supplied)

2

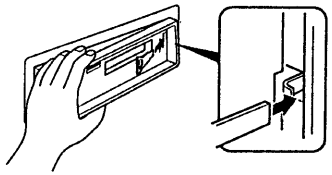

3

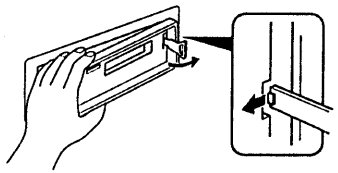

4

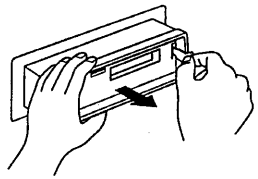

EN

Connections

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- **Run all ground wires to a common ground point.**

Reset Button

When the installation and connections are over, be sure to press the reset button with a ball-point pen etc.

Connexions

Précautions

- Cet appareil est conçu pour fonctionner sur courant continu de 12 V avec masse négative.
- Avant d'effectuer les connexions, débrancher la borne de terre de la batterie du véhicule pour éviter tout court-circuit.
- Brancher les fils d'entrée d'alimentation **jaune** et **rouge** seulement après avoir terminé tous les autres branchements.
- Veiller à ne pas raccorder le fil rouge d'entrée d'alimentation à la borne positive de 12 V qui est alimentée quand la clé de contact est sur la position accessoire.
- **Rassembler tous les fils de terre en un point de masse commun.**

Touche de réinitialisation

Quand l'installation et les connexions sont terminées, appuyer sur la touche de réinitialisation avec un stylo bille ou un objet pointu.

Anschluß

Vorsicht

- Dieses Gerät ist ausschließlich für eine negativ geerdete 12-V-Autobatterie bestimmt.
- Trennen Sie vor dem Anschließen des Geräts die Erdungsklemme der Batterie ab, um einen Kurzschluß zu vermeiden.
- Schließen Sie das **gelbe** und **rote** Stromversorgungskabel erst an, wenn alle anderen Kabel bereits angeschlossen sind.
- Leiten Sie das rote Stromversorgungskabel an einen positiven 12-V-Kontakt, an dem Spannung anliegt, wenn sich das Zündschloß in der Position I bzw. ACC (Position vor der Zündposition) befindet.
- **Schließen Sie alle Erdungskabel an einen gemeinsamen Massepunkt an.**

Rücksetztaste

Nach der Installation und dem Anschluß muß die Rücksetztaste mit einem Kugelschreiber o.ä. gedrückt werden.

Collegamenti

Attenzione

- Questo apparecchio è stato progettato per l'uso solo a 12 V CC con massa negativa.
- Prima di eseguire i collegamenti, scollegare il terminale di massa della batteria dell'auto per evitare cortocircuiti.
- Collegare i cavi di ingresso alimentazione **rosso** e **giallo** solo dopo aver collegato tutti gli altri cavi.
- Assicurarsi di collegare il cavo rosso di ingresso alimentazione al terminale di alimentazione 12 V positivo, che è sotto tensione quando la chiave d accensione è in posizione accessoria.
- **Portare tutti i cavi di massa a un punto di massa comune.**

Pulsante di azzeramento

Dopo avere terminato l'installazione e i collegamenti, assicurarsi di premere il pulsante di azzeramento con la punta di una penna a sfera.



Reset button
Touche de réinitialisation
Rücksetztaste
Pulsante di azzeramento

Connection Diagram — Schémas de connexion — Anschlußdiagramm — Schema di collegamento

Example 1/Exemple 1/Beispiel 1/Esempio 1

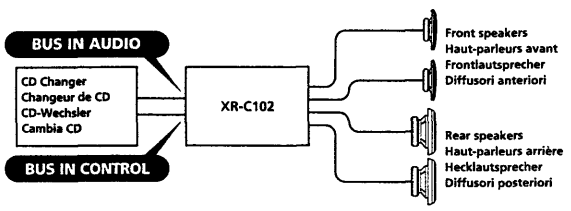

Example 2/Exemple 2/Beispiel 2/Esempio 2

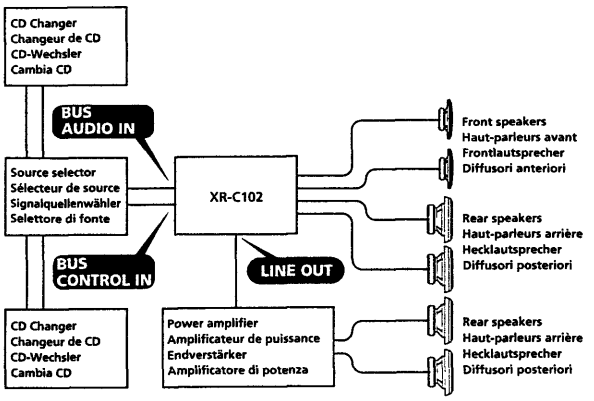

For connecting two changers, the source selector XA-C30 (optional) and the BUS cable RC-61 (1 m) or RC-62 (2 m) (optional) are necessary.

Pour le raccordement de deux changeurs, vous devez utiliser le sélecteur de source XA-C30 (optionnel) et le câble BUS RC-61 (1 m) ou RC-62 (2 m) (optionnels).

Zum Anschluß von zwei Wechslern werden der Signalquellenwähler XA-C30 (getrennt erhältlich) und das BUS-Kabel RC-61 (1 m) oder RC-62 (2 m) (getrennt erhältlich) benötigt.

Se si collegano due cambia CD, utilizzare il selettore di fonte XA-C30 (opzionali) e il cavo BUS RC-61 (1 m) o RC-62 (2 m) (opzionali).

Note on the control leads
The power antenna control lead (blue) supplies 12 V DC power when you turn on the unit.

Notes on speaker connections
- *Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.*
- *Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.*
- *Do not connect the speakers in parallel.*
- *Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.*

Warning
If you have a power antenna without a relay box, connecting this unit with the supplied power connecting cord (5) may damage the antenna.

Remarque sur les fils de contrôle
Le fil de commande (bleu) de l'antenne électrique fournit une tension de 12 V CC lorsque vous mettez l'appareil sous tension.

Remarques sur la connexion des haut-parleurs
- *Utiliser des haut-parleurs avec une impédance de 4 à 8 ohms et qui peuvent supporter l'alimentation fournie sinon ils risqueraient d'être endommagés.*
- *Ne pas connecter les bornes du système de haut-parleur au châssis de la voiture et ne pas raccorder les bornes du haut-parleur droit aux bornes du haut-parleur gauche.*
- *Ne pas essayer de connecter les haut-parleurs en parallèle.*
- *Ne pas connecter d'enceintes acoustiques actives (avec amplificateurs intégrés) aux bornes d'enceintes de cet appareil pour éviter de les endommager. Veiller à raccorder des enceintes passives.*

Avertissement
Si vous disposez d'une antenne électrique sans boîtier de relais, le branchement de cet appareil au moyen du cordon d'alimentation fourni (5) risque d'endommager l'antenne.

Hinweise zu den Steuerleitungen
Die Steuerleitung (blau) der Motorantenne liefert eine Gleichspannung von 12 Volt, wenn Sie das Gerät einschalten.

Hinweise zum Lautsprecheranschluß
- *Verwenden Sie Lautsprecher mit einer Impedanz zwischen 4 und 8 Ohm und ausreichender Belastbarkeit. Ansonsten können die Lautsprecher beschädigt werden.*
- *Verbinden Sie die Lautsprecheranschlüsse nicht mit dem Wagenchassis, und verbinden Sie auch nicht die Anschlüsse des rechten mit denen des linken Lautsprechers.*
- *Schließen Sie niemals Lautsprecher parallel an.*
- *An die Lautsprecheranschlüsse dürfen nur Passivlautsprecher angeschlossen werden. Schließen Sie auf keinen Fall Aktivlautsprecher (mit eingebautem Verstärker) an, da diese beschädigt werden könnten.*

Warnung
Wenn Sie eine Motorantenne ohne Relaiskästchen verwenden, kann durch Anschließen dieses Geräts mit dem mitgelieferten Netzverbindungskabels (5) die Antenne beschädigt werden.

Note sui cavi di collegamento
Il cavo (blu) di controllo dell'antenna fornisce alimentazione CD 12 quando si accende il sintonizzatore.

Note sul collegamento dei diffusori
- *Usare diffusori di impedenza compresa tra 4 e 8 ohm e con capacità di potenza adeguata, altrimenti potrebbero danneggiarsi.*
- *Non collegare i terminali del sistema diffusori al telaio dell'auto e non collegare i terminali del diffusore destro a quelli del diffusore sinistro.*
- *Non collegare i diffusori in parallelo.*
- *Non collegare diffusori attivi (con amplificatori incorporat ai terminali dei diffusori dell'apparecchio, perché i diffusor attivi potrebbero danneggiarsi. Collegare solo diffusori passivi a questi terminali.*

Avvertenza
Se l'antenna che collega l'apparecchio al cavo di alimentazio in dotazione (5) non ha la scatola di relè, l'antenna. si può danneggiare.

Connections Example — Connexions de l'exemple — Anschlußbeispiel — Collegamenti per l'esempio

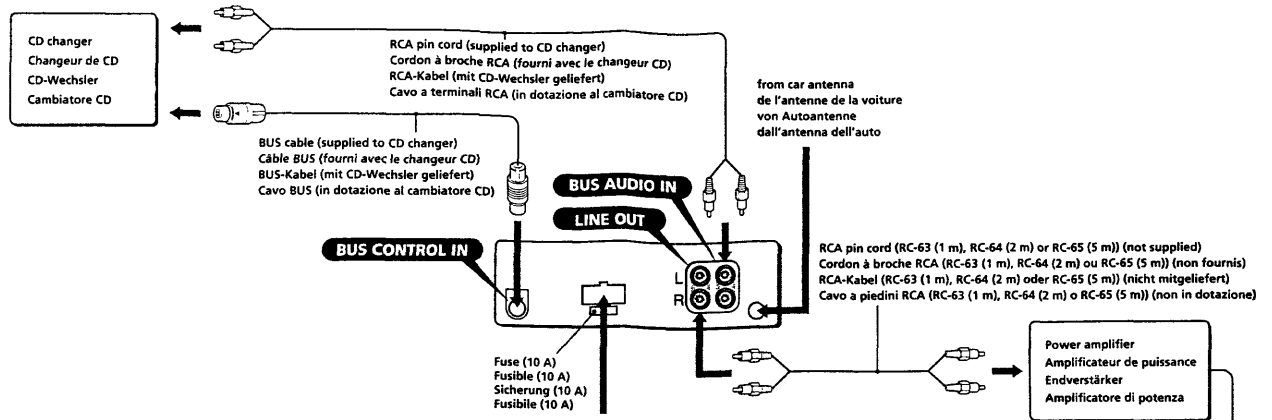
CD changer
Changeur de CD
CD-Wechsler
Cambiatore CD
RCA pin cord (supplied to CD changer)
Cordon à broche RCA (fourni avec le changeur CD)
RCA-Kabel (mit CD-Wechsler geliefert)
Cavo a terminali RCA (in dotazione al cambiatore CD)
BUS cable (supplied to CD changer)
Câble BUS (fourni avec le changeur CD)
BUS-Kabel (mit CD-Wechsler geliefert)
Cavo BUS (in dotazione al cambiatore CD)
from car antenna
de l'antenne de la voiture
von Autoantenne
dall'antenna dell'auto
BUS AUDIO IN
LINE OUT
BUS CONTROL IN
L
R
RCA pin cord (RC-63 (1 m), RC-64 (2 m) or RC-65 (5 m)) (not supplied)
Cordon à broche RCA (RC-63 (1 m), RC-64 (2 m) ou RC-65 (5 m)) (non fournis)
RCA-Kabel (RC-63 (1 m), RC-64 (2 m) oder RC-65 (5 m)) (nicht mitgeliefert)
Cavo a piedini RCA (RC-63 (1 m), RC-64 (2 m) o RC-65 (5 m)) (non in dotazione)
Power amplifier
Amplificateur de puissance
Endverstärker
Amplificatore di potenza
Fuse (10 A)
Fusible (10 A)
Sicherung (10 A)
Fusibile (10 A)
Rear speakers
Haut-parleurs arrière
Hecklautsprecher
Diffusori posteriori
Blue/white striped
Rayé bleu/blanc
blau-weiß gestreift
A strisce blu e bianche
AMP REM
Max. supply current 0.3 A
Courant max. fourni 0,3 A
max. Versorgungsstrom 0,3 A
Alimentazione massima fornita 0,3 A

WARNING
Auxiliary power connectors may vary depending on the car. Be sure to check the power connection diagram sheet supplied with the unit. Improper connections may damage your car. If the supplied power connecting cord can not be used with your car, consult your nearest Sony dealer.

AVERTISSEMENT
Le connecteur d'alimentation auxiliaire peut varier suivant le type de voiture. Vérifiez le schéma du connecteur d'alimentation auxiliaire de votre voiture pour vous assurer que les connexions correspondent. Un raccordement incorrect peut occasionner des dommages à votre voiture. Si le cordon d'alimentation fourni ne peut être utilisé avec votre voiture, consultez votre revendeur Sony.

VORSICHT
Die Hilfsstromanschlüsse können je nach Fahrzeugtyp unterschiedlich sein. Sehen Sie im Hilfsstromanschlußdiagramm für Ihr Fahrzeug nach, wie die Verbindungen ordnungsgemäß vorgenommen werden müssen. Fehlerhafte Verbindungen können zu Schäden an Ihrem Fahrzeug führen. Wenn das mitgelieferte Netzverbindungskabel nicht für den Einsatz in Ihrem Fahrzeug geeignet ist, wenden Sie sich bitte an Ihren Sony-Händler.

ATTENZIONE
I connettori di alimentazione ausiliari possono variare a seconda del tipo di auto. Assicurarsi di controllare il diagramma per il collegamento dell'alimentazione in dotazione con l'apparecchio. Collegamenti non eseguiti correttamente potrebbero danneggiare l'auto. Se il cavo di collegamento dell'alimentazione in dotazione non può essere utilizzato con la vostra auto, consultare il rivenditore Sony più vicino.

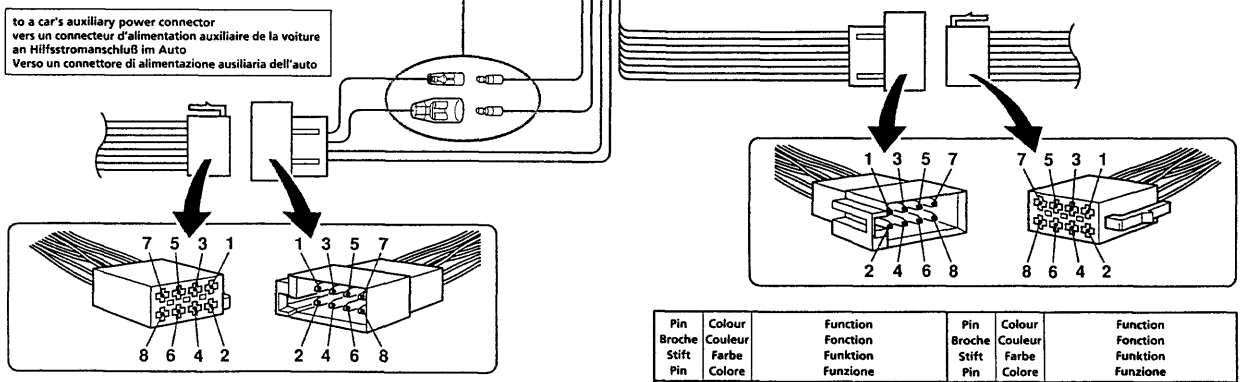
to a car's auxiliary power connector
vers un connecteur d'alimentation auxiliaire de la voiture
an Hilfsstromanschluß im Auto
Verso un connettore di alimentazione ausiliaria dell'auto
to a car's speaker connector
vers un connecteur de haut-parleur de la voiture
an Lautsprecheranschluß im Auto
verso un connettore del diffusore dell'auto
7 5 3 1
8 6 4 2
1 3 5 7
2 4 6 8

Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione	Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione
4	Yellow Jaune Gelb Giallo	continuous power supply alimentation continue permanente Stromversorgung alimentazione continua	7	Red Rouge Rot Rosso	switched power supply alimentation commutée geschaltete Stromversorgung alimentazione a scatto
5	Blue Bleu Blau Blu	power antenna control antenne électrique elektronische Antenne antenna elettrica	8	Black Noir Schwarz Nero	ground masse Masse terra

Positions 1, 2, 3 and 6 do not have pins.
Les positions 1, 2, 3 et 6 ne comportent pas de broche.
An Position 1, 2, 3 und 6 befinden sich keine Stifte.
Le posizioni 1, 2, 3 e 6 non hanno pin.

Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione	Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione
1	Purple Mauve Violett Viola	+: Speaker, Rear, Right +: haut-parleur, arrière, droit +: Lautsprecher hinten rechts +:Altoparlante, posteriore, destro	5	White Blanc Weiß Bianco	+: Speaker, Front, Left +: haut-parleur, avant, gauche +: Lautsprecher vorne links +: Altoparlante, anteriore, sinistro
2		–: Speaker, Rear, Right –: haut-parleur, arrière, droit –: Lautsprecher hinten rechts –: Altoparlante, posteriore, destro	6		–: Speaker, Front, Left –: haut-parleur, avant, gauche –: Lautsprecher vorne links –: Altoparlante, anteriore, sinistro
3	Gray Gris Grau Grigio	+: Speaker, Front, Right +: haut-parleur, avant, droit +: Lautsprecher vorne rechts +: Altoparlante, anteriore, destro	7	Green Vert Grün Verde	+: Speaker, Rear, Left +: haut-parleur, arrière, gauche +: Lautsprecher hinten links +: Altoparlante, posteriore, sinistro
4		–: Speaker, Front, Right –: haut-parleur, avant, droit –: Lautsprecher vorne rechts –: Altoparlante, anteriore, destro	8		–: Speaker, Rear, Left –: haut-parleur, arrière, gauche –: Lautsprecher hinten links –: Altoparlante, posteriore, sinistro

Negative polarity positions 2, 4, 6 and 8 have striped cords.
Les positions de polarité négative 2, 4, 6 et 8 sont dotées de cordons rayés.
An den negativ gepolten Positionen (2, 4, 6 und 8) befinden sich gestreifte Adern.
Le posizioni a polarità negativa 2, 4, 6 e 8 hanno cavi spelati.

SECTION 2
DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. COVER

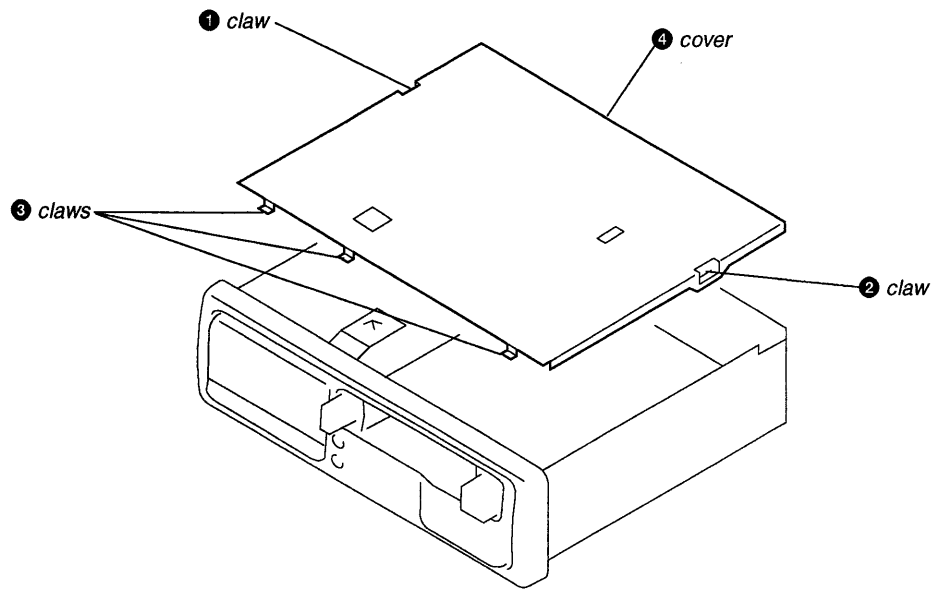

2-2. LOCK ASSY

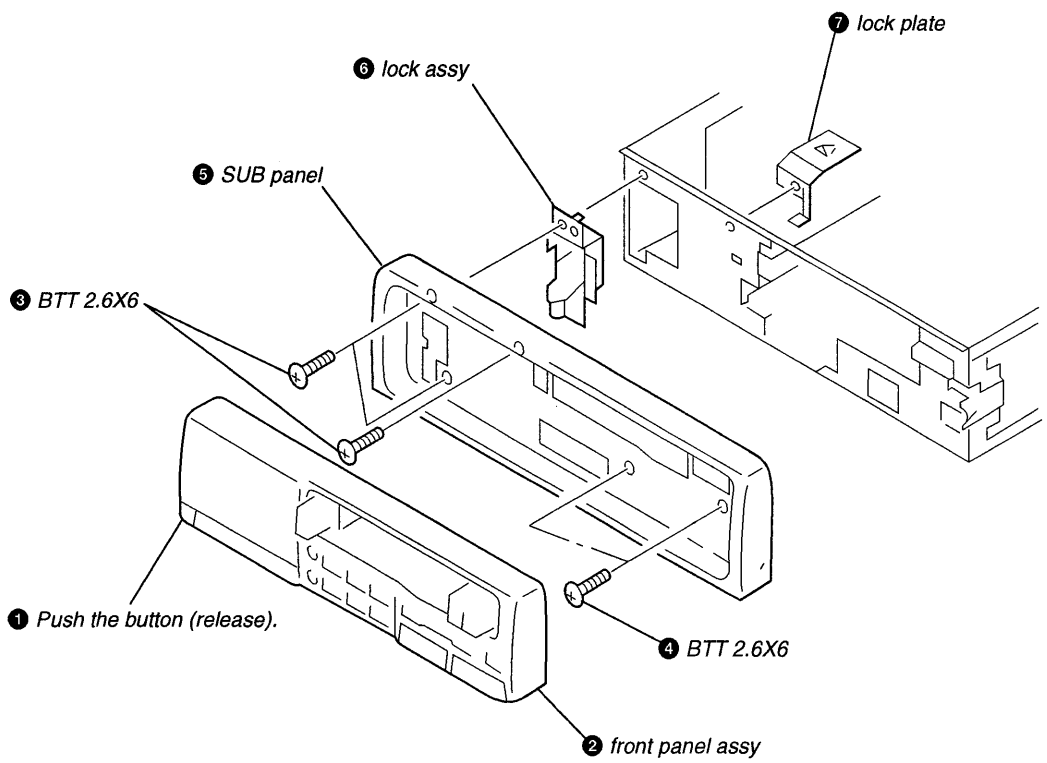

2-3. MD BLOCK

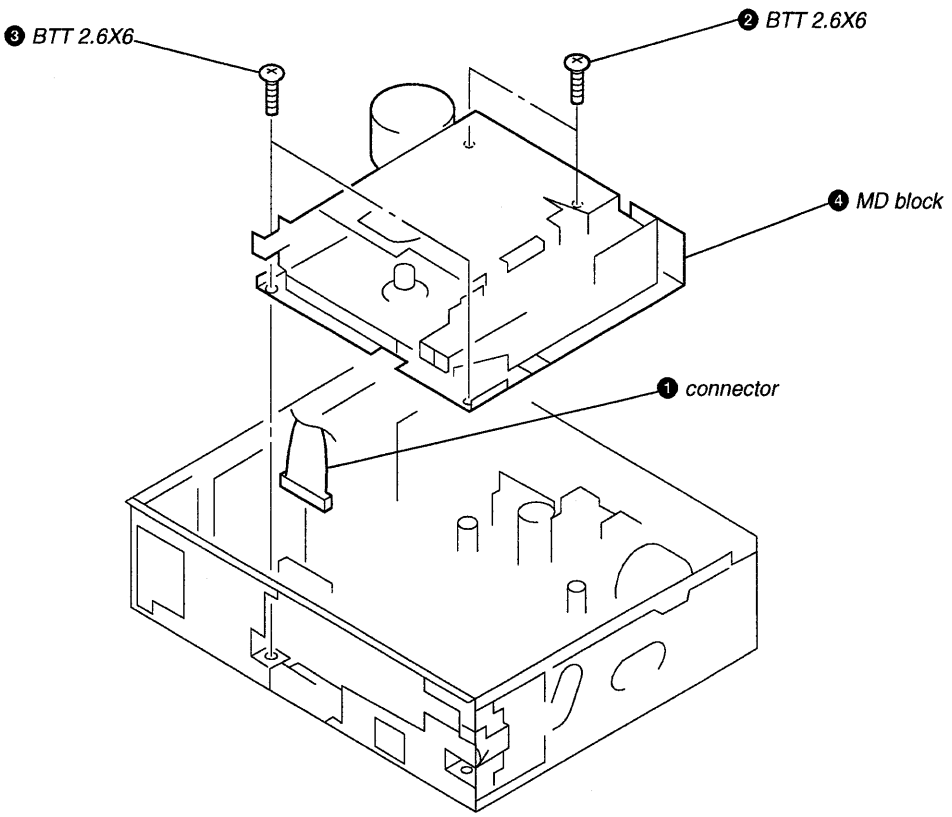

2-4. HEAT SINK

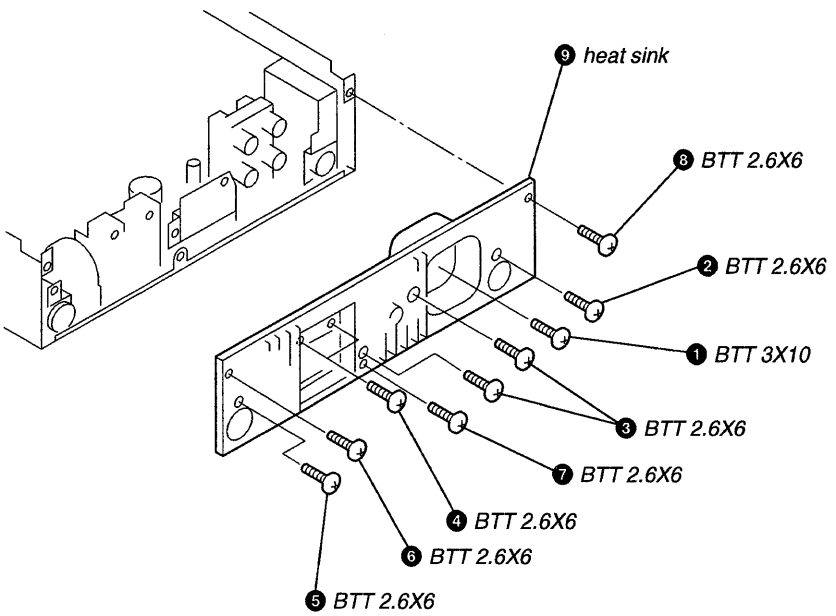

2-5. MAIN BOARD

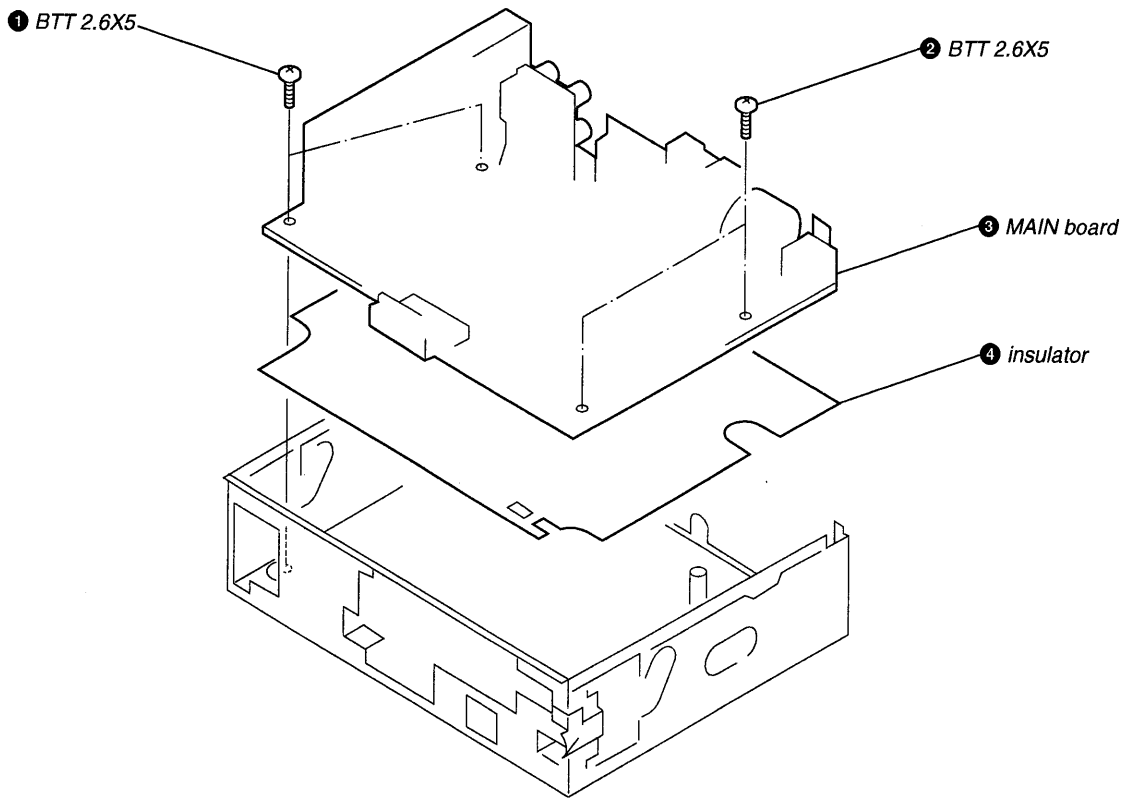

SECTION 3
MECHANICAL ADJUSTMENTS

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment :
   PB head — Pinch roller
   Idler — Rubber belt
   Capstan
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After the adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4 V).

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	25 – 55 g•cm (0.35 – 0.76 oz•inch)
FWD Back Tension		1.5 – 4 g•cm (0.02 – 0.06 oz•inch)
REV	CQ-102RC	25 – 55 g•cm (0.35 – 0.76 oz•inch)
REV Back Tension		1.5 – 4 g•cm (0.02 – 0.06 oz•inch)
FF, REW	CQ-201B	50 – 150 g•cm (0.69 – 2.08 oz•inch)

SECTION 4
ELECTRICAL ADJUSTMENTS

DECK SECTION | **0 dB = 0.775 V**

1. The adjustments should be performed in the order given in this service manual.
2. The adjustments should be performed for both L-CH and R-CH.

Test Tape

Type	Signal	Used for
P-4-A063	6.3 kHz, –10 dB	head azimuth adjustment
WS-48A	3 kHz, 0 dB	tape speed adjustment

PB Head Azimuth Adjustment

Procedure :

1. Put the set into the FWD PB mode.

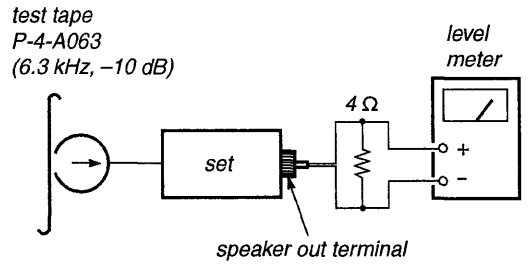

2. Turn the screw and check the output peak value. Adjust the screw so that the peak value in channels L and R coincides within 2 dB.

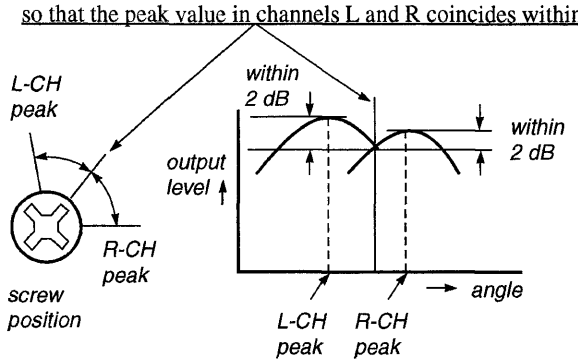

3. Check the phase in the FWD PB mode.

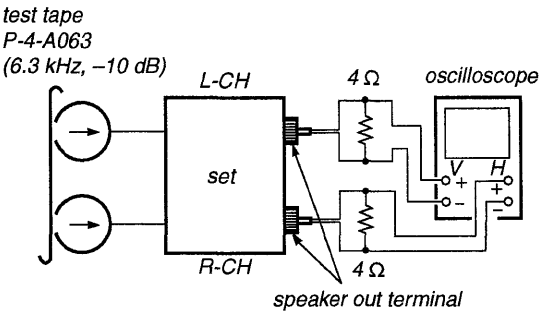

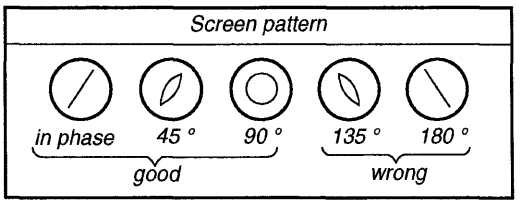

4. Repeat the above adjustment for the REV PB mode.
5. Check that output level difference between FWD PB mode and REV PB mode is within 4 dB.

Adjustment Location :

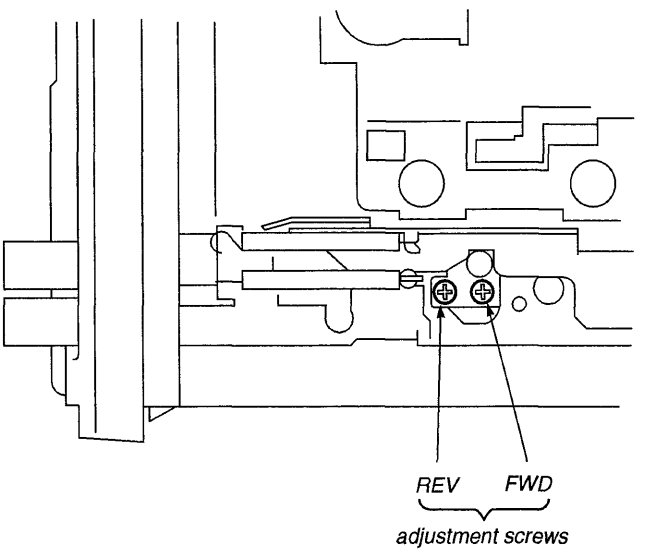

Tape Speed Adjustment

Setting :

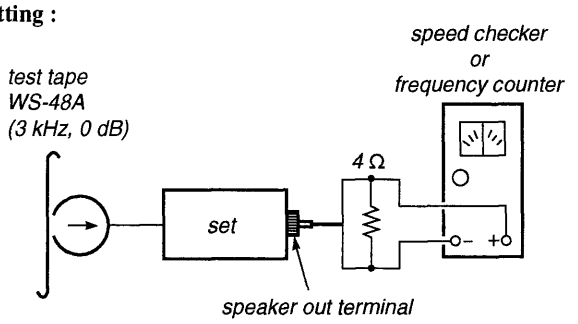

Procedure :

1. Put the set into the FWD PB mode.
2. Adjust adjustment resistor for inside capstan motor so that the reading on the speed checker or frequency counter becomes in specification.

Specification : Constant speed

Speed checker	Frequency counter
– 1.5 to + 0.5 %	2,955 to 3,015 Hz

Adjustment Location :

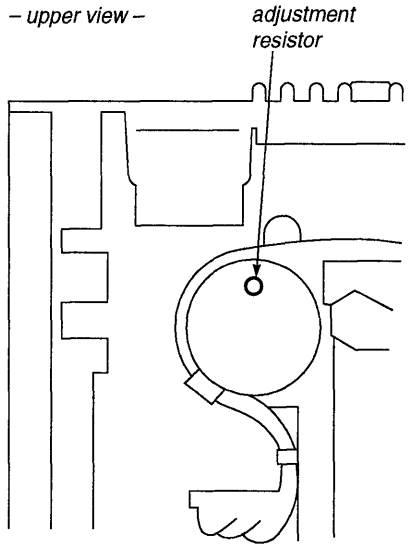

TUNER SECTION | 0 dB = 1 µV

Cautions during repair

When the tuner assy is defective, replace it by a new one because its internal block is difficult to repair.

TEST MODE

This set have the test mode function. In the test mode, FM Auto Stop Level and AM Auto Stop Level adjustments can be performed easier than it in ordinary procedure.

<Set the Test Mode>

1. Set the "OFF" mode.
2. Push the preset [1] button.
3. Press the [OFF] button while pressing the [FM/AM] button. (Then the display indicates all lights, the test mode is set.)

<Release the Test mode>

1. Push the [OFF] button.

FM VT Adjustment

Setting :

FM/AM button : FMI

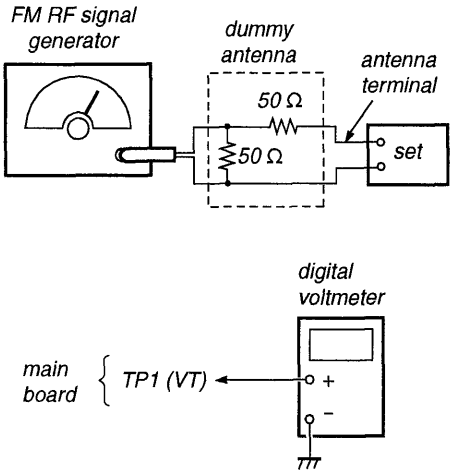

Procedure :

1. Tune the set to 108 MHz.
2. Adjust L104 so that the reading on the digital voltmeter becomes 7.2 ± 0.05 V.

Adjustment Location : See page 17.

FM DET Adjustment

Setting :

FM/AM button : FMI

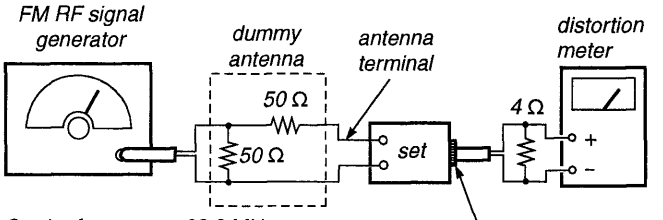

Carrier frequency : 98.0 MHz
Output level : 60 dB (1 mV)
Mode : mono
Modulation : 1 kHz, 75 kHz deviation (100 %)

Procedure :

1. Tune the set to 98.0 MHz.
2. Adjust L111 so that the reading on the distortion meter becomes to minimum.

Adjustment Location : See page 17.

FM MIX Adjustment

Setting :

FM/AM button : FMI

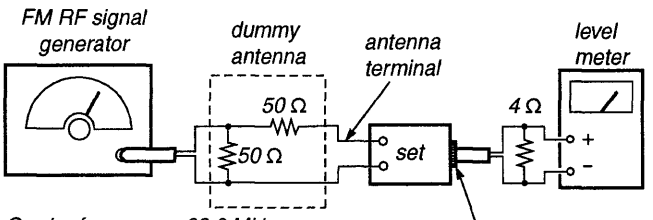

Carrier frequency : 98.0 MHz
Output level : 10 dB (3.2 µV)
Mode : mono
Modulation : 1 kHz, 75 kHz deviation (100 %)

Procedure:

1. Tune the set to 98.0 MHz.
2. Adjust L103 so that the reading on the level meter becomes to maximum.

Adjustment Location : See page 17.

FM Tracking Adjustment

Setting :

FM/AM button : FMI

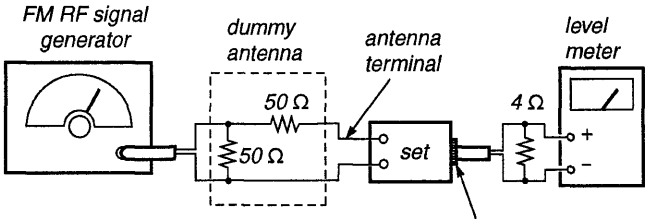

Carrier frequency : 108 MHz, 87.5 MHz
Output level : 10 dB (3.2 µV)
Mode : mono
Modulation : 1 kHz, 75 kHz deviation (100 %)

Procedure :

1. Tune the set to 108 MHz. (FM RF signal generator : Carrier frequency 108 MHz)
2. Adjust L102 so that the reading on the level meter becomes to maximum.
3. Tune the set to 87.5 MHz. (FM RF signal generator : Carrier frequency 87.5 MHz)
4. Adjust L100 so that the reading on the level meter becomes to maximum.

Adjustment Location : See page 17.

FM SEP Adjustment

Setting :

FM/AM button : FMI

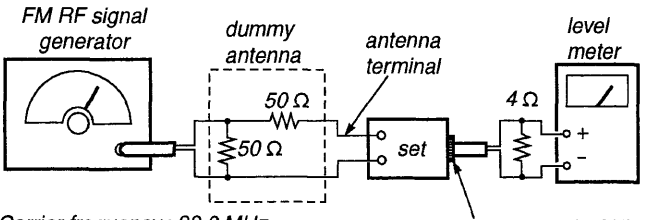

Carrier frequency : 98.0 MHz
Output level : 60 dB (1 mV)
Mode : mono (R-CH)
Modulation : 1 kHz, 67.5 kHz deviation (90 %)
19 kHz, 7.5 kHz deviation (10 %)

Procedure :

1. Tune the set to 98.0 MHz.
2. Adjust R134 so that the reading on the level meter becomes to minimum.

Adjustment Location : See page 17.

FM SNC Adjustment

Setting :

FM/AM button : FMI

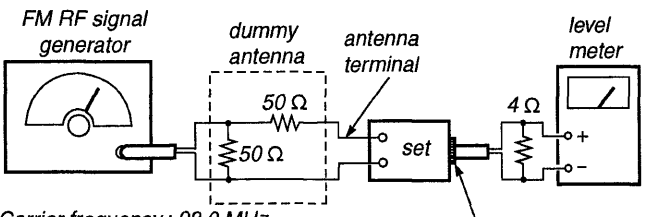

Carrier frequency : 98.0 MHz
Output level : 40 dB (100 µV)
Mode : mono (L-CH)
Modulation : 1 kHz, 67.5 kHz deviation (90 %)
19 kHz, 7.5 kHz deviation (10 %)

Procedure :

1. Tune the set to 98.0 MHz.
2. The then output level is supposing that (A) dB.
3. Change the FM RF signal generator mode to R-CH.
4. Adjust R138 so that the output level is (A) – 12 dB.

Adjustment Location : See page 17.

FM Auto Stop Level Adjustment

Note : Be sure to perform this adjustment before "AM Auto Stop Level Adjustment".

Setting :

FM/AM button : FMI

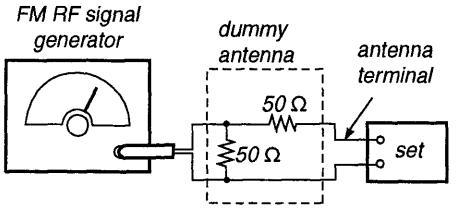

Carrier frequency: 98.0 MHz
Output level : 22 dB (12.6 µV)
Mode : mono
Modulation : 1 kHz, 75 kHz deviation (100 %)

Procedure :

1. Set to the test mode. (See page 13.)
2. Push the [FM/AM] button and set to FMI.

LCD display

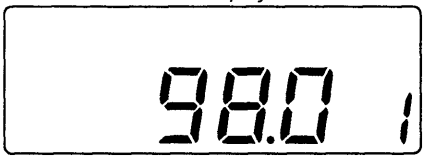

3. Adjust R131 like to appear the ST indicator of LCD display.

LCD display

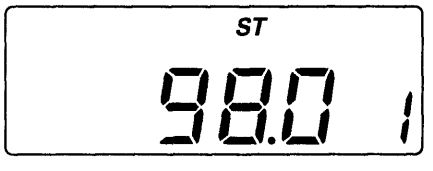

Adjustment Location : See page 17.

AM VT Adjustment

Setting :

FM/AM button : AM

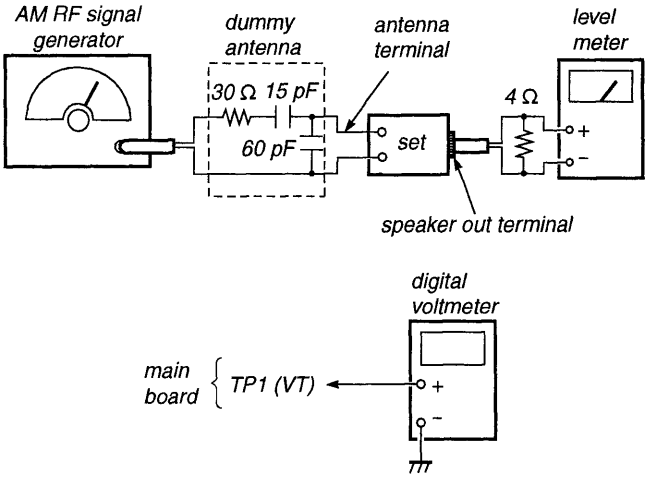

Procedure :

1. Tune the set to 531 kHz.
2. Adjust L108 so that the reading on the digital voltmeter becomes 1.2 ± 0.05 V.

Adjustment Location : See page 17.

AM IFT Adjustment

Setting :

FM/AM button : AM

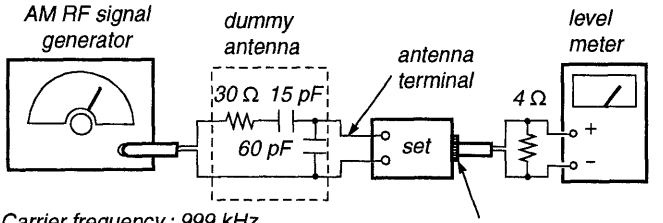

Carrier frequency : 999 kHz
Output level : 20 dB (10 µV)
Modulation : 400 Hz, 22.5 kHz deviation (30 %)

Procedure :

1. Tune the set to 999 kHz.
2. Adjust L110 so that the reading on the level meter becomes to maximum.

Adjustment Location : See page 17.

AM Tracking Adjustment

Setting :

FM/AM button : AM

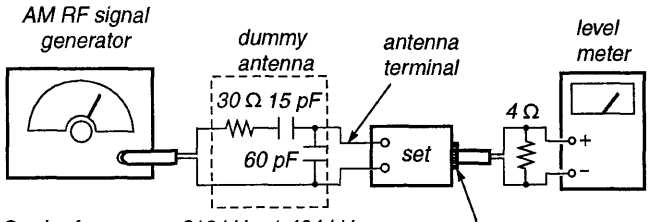

Carrier frequency : 612 kHz, 1,404 kHz
Output level : 20 dB (10 μV)
Modulation : 400 Hz, 22.5 kHz deviation (30 %)

Procedure :

1. Tune the set to 612 kHz. (AM RF signal generator : Carrier frequency 612 kHz)
2. Adjust L107 so that the reading on the level meter becomes to maximum.
3. Tune the set to 1,404 kHz. (AM RF signal generator : Carrier frequency 1,404 kHz)
4. Adjust C119 so that the reading on the level meter becomes to maximum.

Adjustment Location : See page 17.

AM Auto Stop Level Adjustment

Setting :

FM/AM button : AM

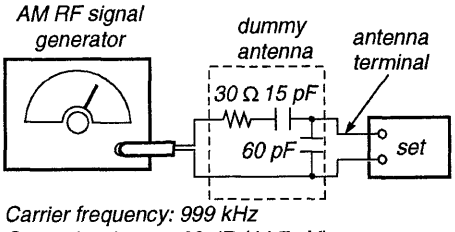

Carrier frequency: 999 kHz
Output level : 33 dB (44.7 μV)
Modulation : 400 Hz, 22.5 kHz deviation (30 %)

Procedure :

1. Set to the test mode. (See page 13.)
2. Push the FM/AM button and set to AM.

LCD display

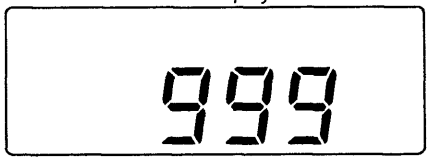

3. Push the SEL button and set to MODE1.

LCD display

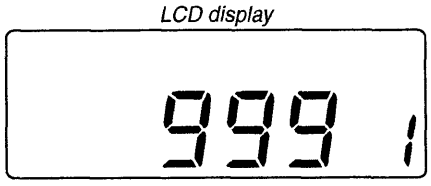

4. Adjust R141 like to appear the ST indicator of LCD display.

LCD display

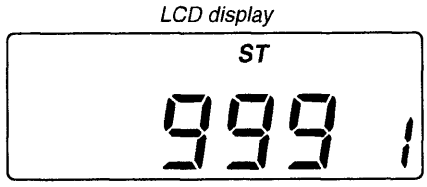

Adjustment Location : See page 17.

SDK Adjustment (ARI Level and SK Sensitivity Adjustment)

Setting :

FM/AM button : FMI

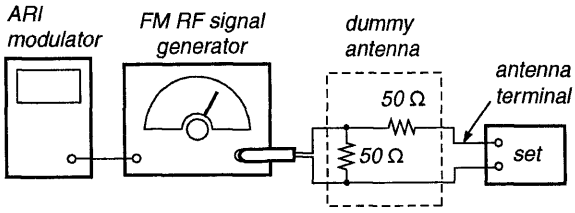

Carrier frequency : 98.0 MHz
Output level : 60 dB (1 mV)
Mode : MAIN (L + R)
Modulation : 1 kHz, 22.5 kHz deviation (30 %)
19 kHz, 6.75 kHz deviation (9 %)
: SK (4.7 %), DK (30 %), BK (60 %)

Procedure :

1. Tune the set to 98.0 MHz.
2. Adjust L251 and R251 so that the waveform of the oscilloscope becomes maximum. (ARI Level Adjustment)
   (SK 4.7 %, DK 30 %, BK 0 %)
3. Adjust R257 like to appear the SK indicator of LCD display.
   (SK Sensitivity Adjustment)
   (SK 0.8 %, DK 0 %, BK 60 %)

LCD display

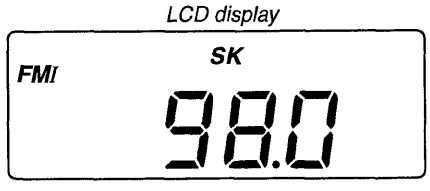

Adjustment Location : See page 17.

Adjustment Location : ET201 (tuner assy) – component side –

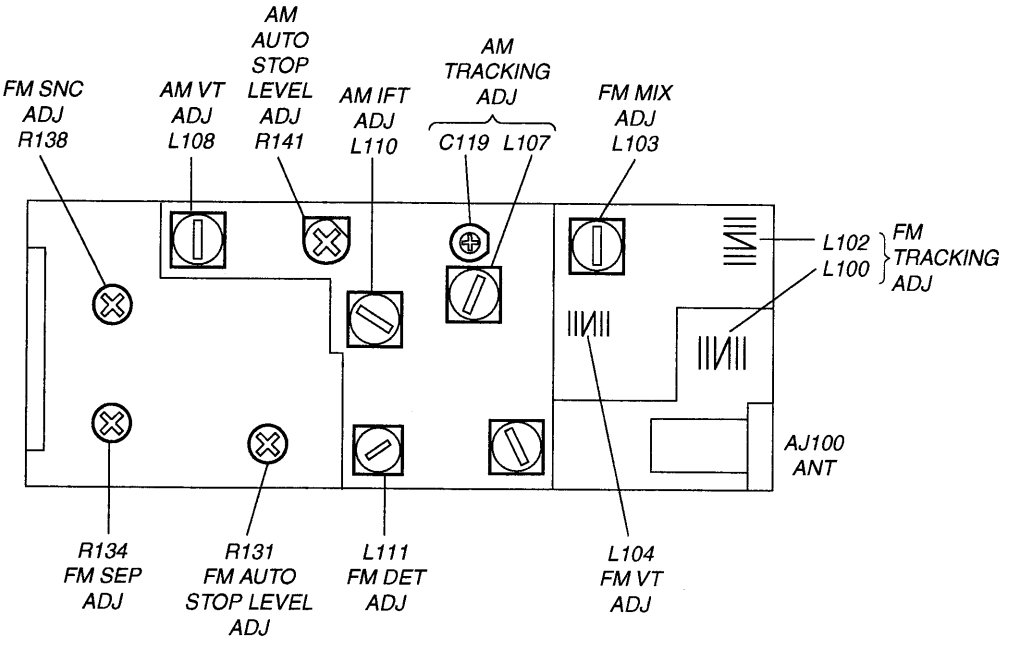

Measurement Point : main board (component side)

– set upper view –

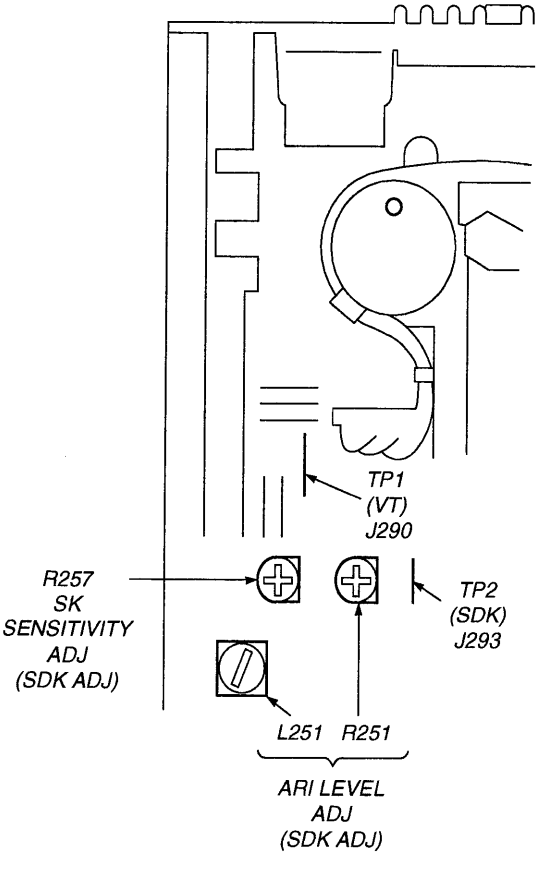

SECTION 5
DIAGRAMS

5-1. IC PIN DESCRIPTION

• IC701 LC72356-9241 (System Controller)

Pin No.	Pin Name	I/O	Pin Description
1	XIN	I	4.5 MHz crystal oscillator input pin
2	TEST2	I	LSI test pin (Fixed at "L" in this set.)
3	SEEK	O	SEEK control output pin ("L" : NORMAL, "H" : SEEK)
4	FM/$\overline{\text{AM}}$	O	BAND select output pin ("L" : AM, "H" : FM)
5	$\overline{\text{LW}}$	O	LW band select output pin (Not used in this set.)
6	LOCAL	O	LOCAL control output pin ("L" : DX, "H" : LOCAL)
7	—	O	Not used. (Connect to GND.)
8	VOL SO	O	Serial data output pin for volume.
9	VOL CK	O	Serial clock output pin for volume.
10	CDC EN	O	CD select button with/without setting pin
11	CDC SI	I	Serial data input pin for SONY BUS.
12	CDC SO	O	Serial data output pin for SONY BUS.
13	CDC CLK	O	Serial clock output pin for SONY BUS.
14	—	O	Not used. (Connect to GND.)
15	MUTE	O	Mute output pin
16	$\overline{\text{AMP MUTE}}$	O	Audio control output pin (Mute)
17	$\overline{\text{BUS RST}}$	O	Bus reset output pin for SONY BUS. ("L" : RESET)
18	$\overline{\text{BUS ON}}$	O	Bus control output pin for SONY BUS. ("L" : ON)
19-25	—	O	Not used. (Open)
26	A.STBY	O	Audio control output pin
27	FOR/$\overline{\text{REV}}$	I	Forward/reverse detection input pin ("L" : REV, "H" : FOR)
28	$\overline{\text{WIND}}$	I	Tape Fast Forward/Rewind detection input pin ("H" : NORMAL, "L" : WIND)
29	RA/$\overline{\text{TA}}$	I	Radio/tape mode detection input pin ("H" : RADIO, "L" : TAPE)
30	$\overline{\text{TEST}}$	I	Test mode wake-up input pin
31	VDD	—	Power supply pin (5 V ± 5 %)
32	$\overline{\text{ACC CHK}}$	I	Accessory detection input pin ("L" : ACC ON)
33	MOTOR	O	Motor control output pin
34	POWER ON	O	Power control output pin
35	LAMP ON	O	Illumination lamp control output pin
36-43	—	O	Not used. (Open)
44	BEEP	O	Caution alarm output pin
45	LCD CE	O	Chip enable output pin for LCD driver.
46	LCD CLK	O	Serial clock output pin for LCD driver.
47	LCD SO	O	Serial data output pin for LCD driver.
48	$\overline{\text{LCD INH}}$	O	Display light off control output pin for LCD driver. (Normally, "L" : All light off)
49	$\overline{\text{PANEL}}$	I	Input pin for detecting mounting of front panel. ("L" : ON, "H" : OFF)
50	OIRT EN	I	Fixed at "H" in this set.
51	LW EN	I	LW band with/without select pin. (Fixed at "L" in this set.)
52	SDK EN	I	Traffic information function select pin. (Fixed at "H" in this set.)
53	10k EN	I	Frequency select switch select pin. (Not used in this set.)
54	P.SEL	I	Illumination light ON/OFF select pin at Power off. (Fixed at "L" in this set.)
55	BAT CHK	I	Battery detection input pin ("H" : Battery ON)
56	$\overline{\text{RESET}}$	I	System reset input pin
57	—	O	Not used. (Open)
58	$\overline{\text{MONO}}$	—	Not used. (Open)
59, 60	SEL B, SEL A	O	Audio source select output pin
61-63	ADC2-ADC0	I	Key input pin

Pin No.	Pin Name	I/O	Pin Description
64	—	O	Not used. (Connect to VDD.)
65	DK	I	DK signal input pin
66	SK	I	SK signal input pin
67	$\overline{\text{HOLD}}$	I	HOLD pin (PLL and CLOCK STOP control)
68	$\overline{\text{SNS}}$	I	Power fail detection pin (Connect to VDD.)
69	SD/ST	I	SD/stereo station detect input pin
70	IF	I	IF count input pin (FM = 10.7 MHz, AM = 450 kHz)
71	EO3	O	2nd PLL error output pin (Not used in this set.)
72	SUBPD	O	Sub error output pin (For High speed lock up) (Not used in this set.)
73	VDD	—	Power supply pin (5 V ± 5 %)
74	AM IN	I	AM VCO input pin
75	FM IN	I	FM VCO input pin
76	GND	—	GND
77	EO2	O	PLL error output pin (Not used in this set.)
78	EO1	O	PLL error output pin
79	TEST1	I	LSI test pin (Fixed at "L" in this set.)
80	XOUT	O	4.5 MHz crystal oscillator output pin

5-2. PRINTED WIRING BOARDS

• **Semiconductor Location**

Ref. No.	Location
D301	F-8
D501	C-5
D601	E-2
D602	D-2
D604	D-3
D606	F-1
D607	I-4
D621	C-3
D622	B-2
D711	I-4
D712	I-5
D713	I-5
D714	I-7
D715	I-7
D716	I-6
D717	I-4
D718	I-4
D719	I-4
D771	D-1
D773	B-1
D774	C-1
D775	C-1
D776	B-1
D801	H-20
D802	H-20
D803	H-19
D804	H-19
D805	H-19
IC251	H-9
IC301	F-7
IC401	E-5
IC451	E-7
IC481	E-8
IC501	B-6
IC701	G-4
IC771	E-2
IC801	G-19
Q301	E-3
Q302	E-3
Q501	D-6
Q502	D-7
Q503	D-7
Q504	D-6
Q505	D-3
Q506	D-4
Q507	D-4
Q601	F-2
Q602	D-3
Q603	D-3
Q604	F-3
Q605	F-2
Q606	G-2
Q621	C-3
Q622	C-3
Q701	F-5
Q702	F-6

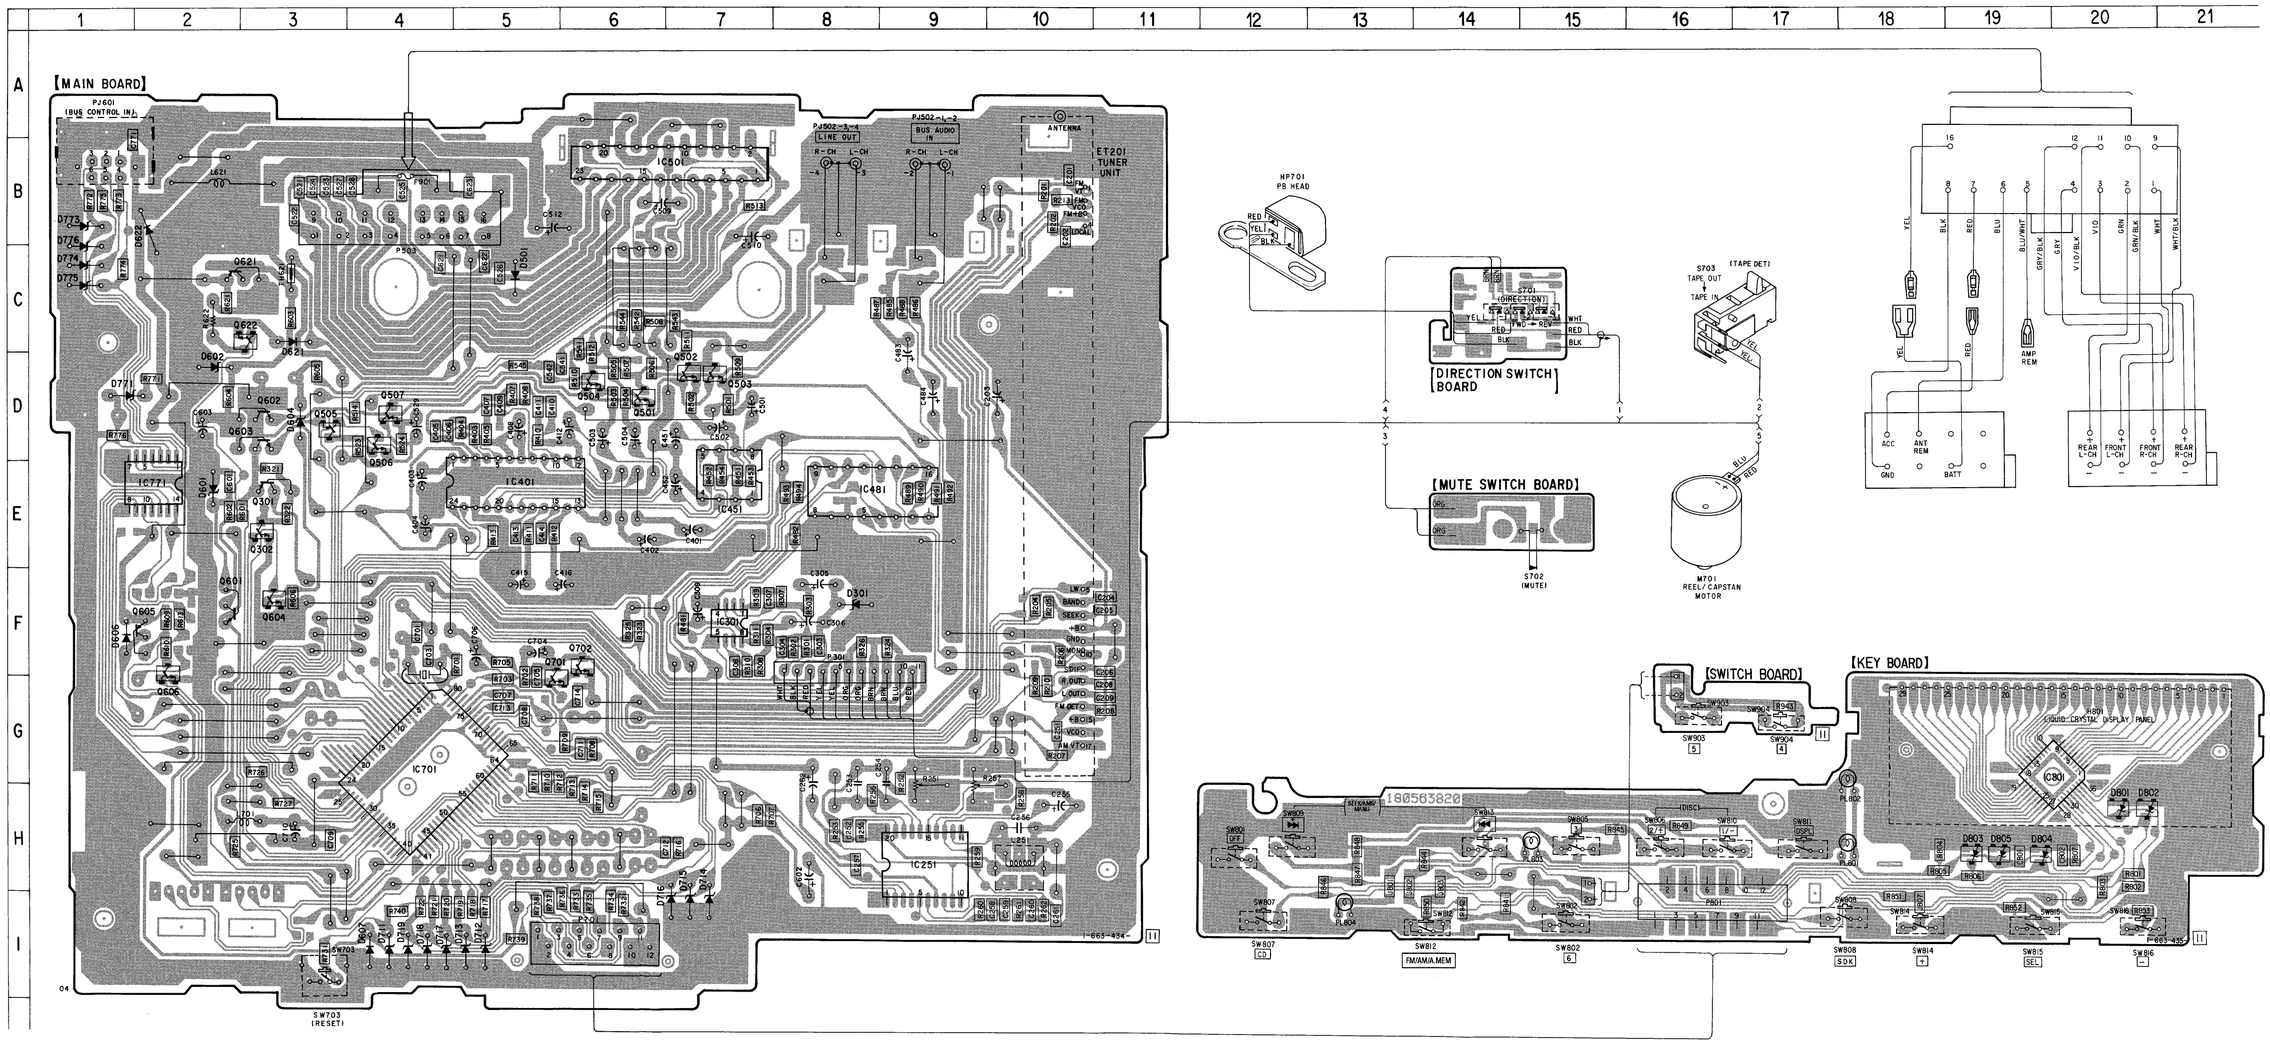

Note :
- ○— : parts extracted from the component side.
- —— : parts extracted from the conductor side.

5-3. SCHEMATIC DIAGRAM • Refer to page 27 for IC Block Diagrams.

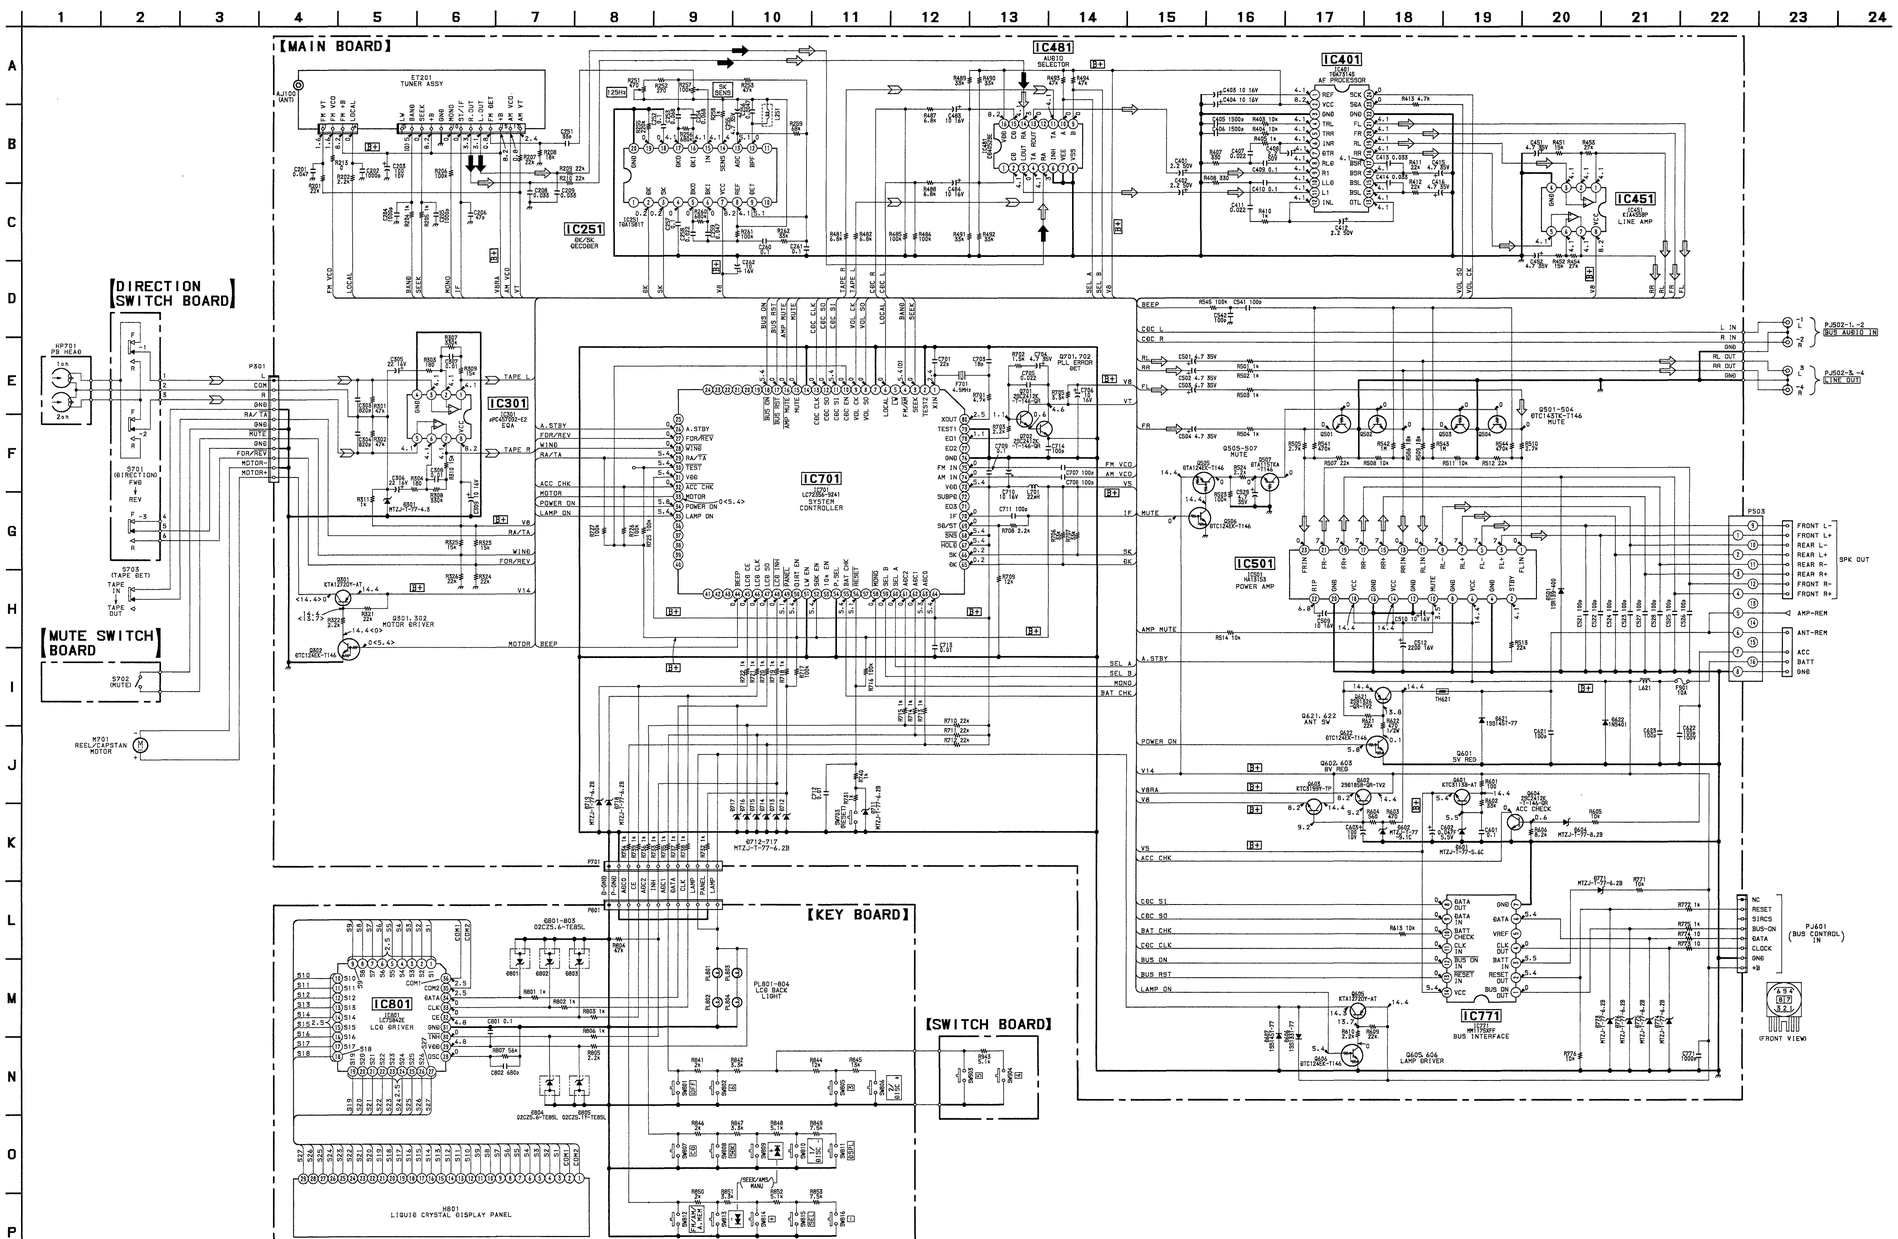

Note :

- All capacitors are in µF unless otherwise noted. pF : µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- B+ : B+ Line.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltage is dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
  ( ) : AM
  < > : PB
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerance.
- Signal path.
  ⇨ : FM
  ➡ : AM
  ⇨ : PB

• **IC Block Diagrams**

IC401 TDA7314S

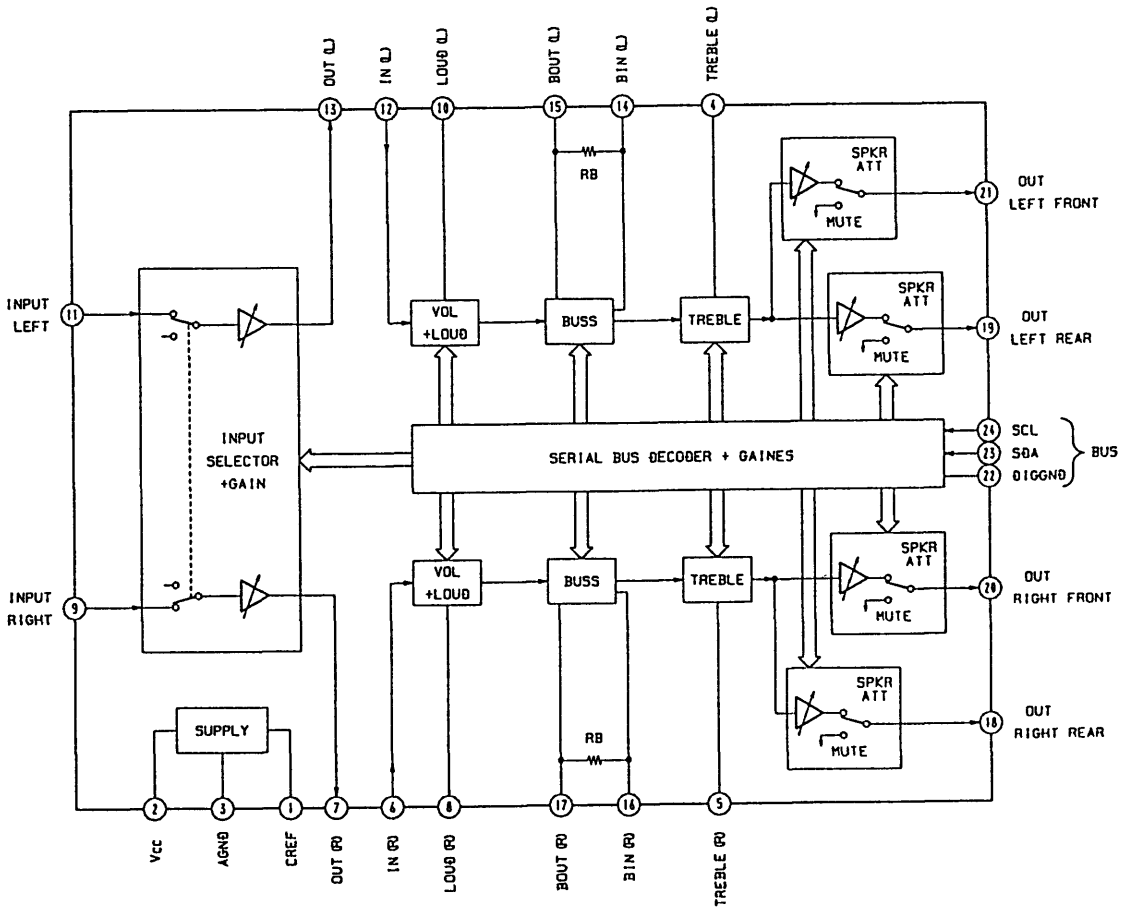

IC501 HA13153

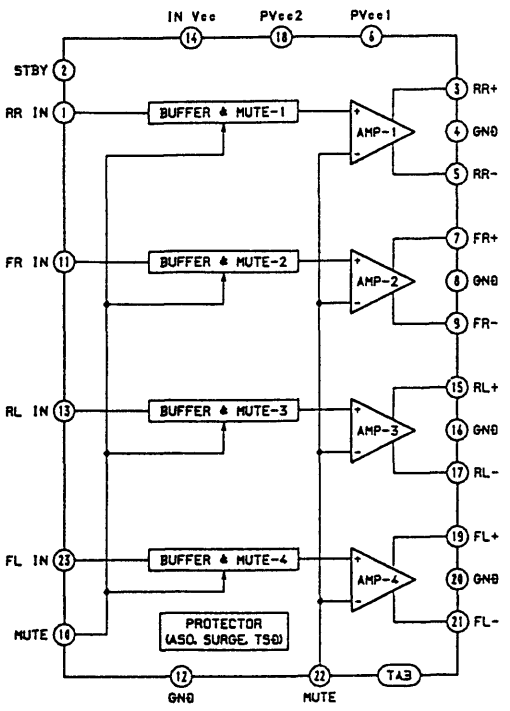

IC771 MM1175XFF

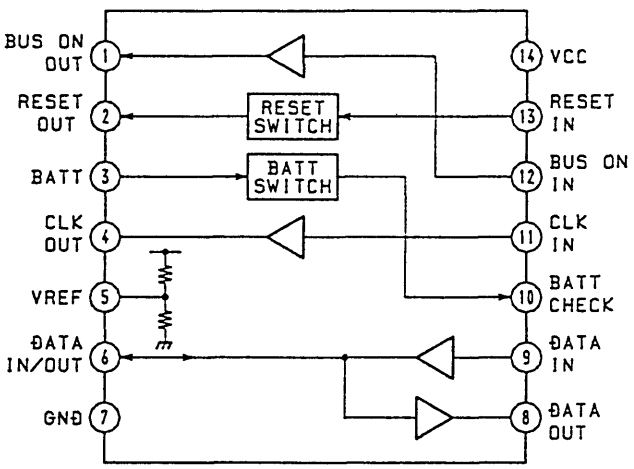

SECTION 6
EXPLODED VIEWS

SEE ADDITIONAL INFORMATION

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE) ... (RED)
  ↑ Parts Color ↑ Cabinet's Color
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

6-1. CHASSIS SECTION

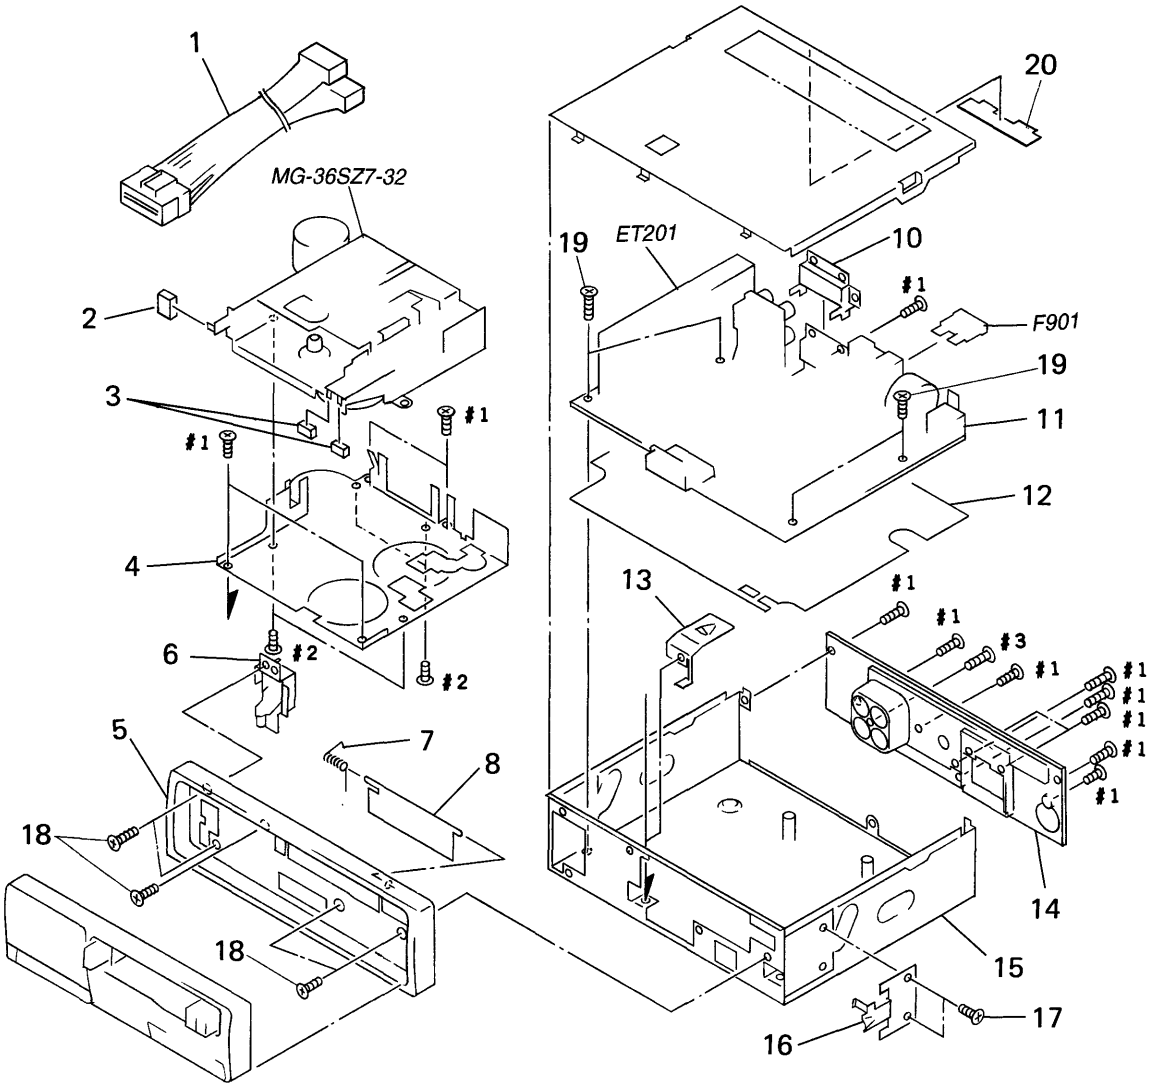

Ref. No.	Part No.	Description	Remark
1	1-777-898-11	CORD (WITH CONNECTOR) (POWER)	
2	3-937-528-01	COVER (EJECT)	
3	3-937-529-01	COVER (FF/REW)	
* 4	3-937-531-01	BRACKET (MD)	
5	3-937-525-01	PANEL, SUB	
6	X-3372-433-1	LOCK ASSY	
7	3-915-720-01	SPRING (C DOOR), TORSION	
8	3-937-526-01	DOOR, CASSETTE	
9	3-937-523-01	COVER	
* 10	3-937-533-01	BRACKET (IC)	
* 11	A-3294-152-A	MAIN BOARD, COMPLETE	
* 12	3-937-532-01	INSULATOR	
13	3-916-055-01	PLATE, LOCK	
* 14	3-937-530-01	HEAT SINK	
* 15	X-3372-423-1	CHASSIS ASSY	
16	3-916-056-01	PLATE (R), LOCK	
17	3-344-561-21	SCREW (M4X4)	
18	3-916-975-11	SCREW (2.6X6) (BZN), +BTT	
19	3-916-976-01	SCREW (2.6X5) (CZN), +BTT	
* 20	3-939-569-01	SHEET (VIBRATION PROOF)	
ET201	A-3294-179-A	TUNER ASSY	
F901	1-533-330-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	

6-2. FRONT PANEL SECTION

SEE ADDITIONAL INFORMATION

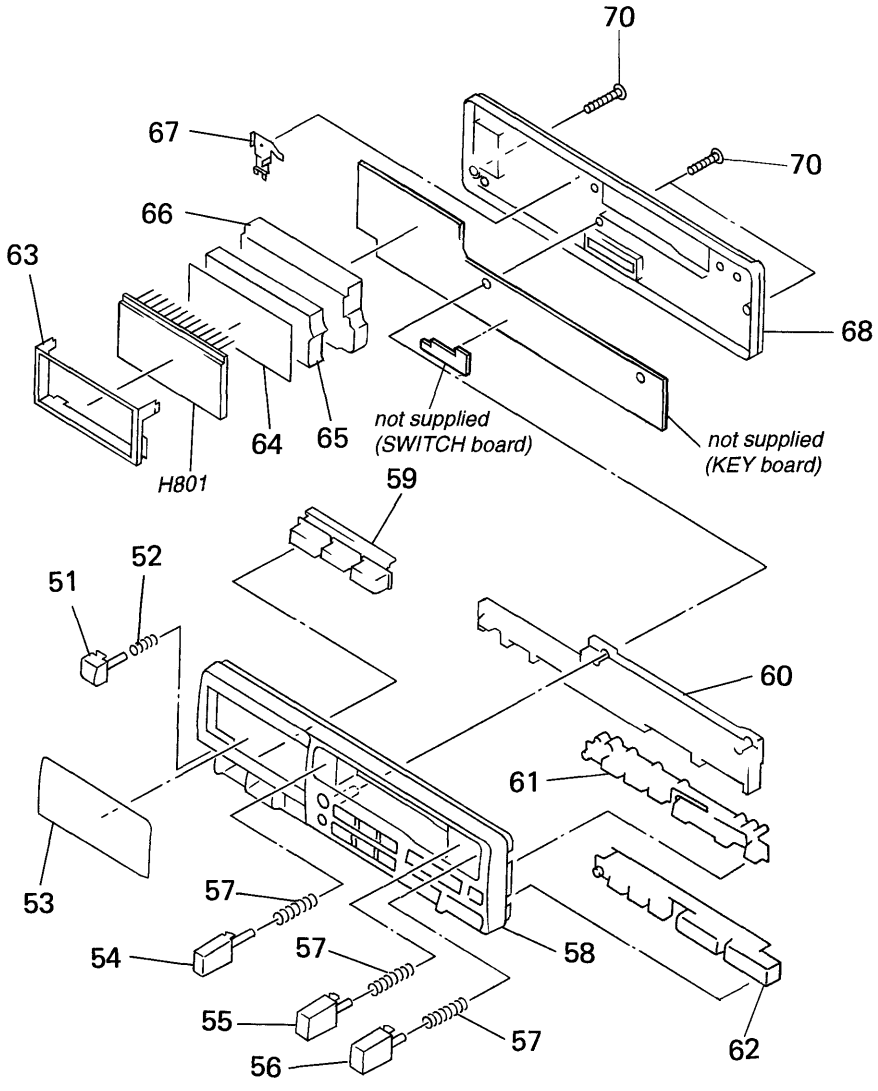

Ref. No.	Part No.	Description	Remark
51	3-937-551-01	BUTTON (RELEASE)	
52	3-937-553-01	SPRING (RELEASE)	
53	3-007-661-01	PLATE, INDICATION	
54	3-937-550-01	BUTTON (EJECT)	
55	3-937-549-01	BUTTON (REW)	
56	3-937-548-01	BUTTON (FF)	
57	3-937-632-01	SPRING (EJECT)	
58	3-007-657-01	PANEL, FRONT	
59	3-937-547-01	BUTTON (SEL)	
* 60	3-937-556-01	PLATE, LIGHT GUIDE	
61	3-007-666-01	BUTTON (1-3)	
62	3-007-664-01	BUTTON (FM/AM)	
* 63	3-937-557-01	PLATE (LCD), GROUND	
* 64	3-937-560-01	SHEET (REFLECTOR)	
* 65	3-937-559-01	PLATE (LCD), LIGHT GUIDE	
66	3-937-558-01	HOLDER (LCD)	
67	3-937-555-01	PLATE (FP), GROUND	
68	3-939-882-01	PANEL, FRONT BACK	
70	3-916-981-11	SCREW (2X8) (BZN), +BTT	
H801	1-801-456-11	DISPLAY PANEL, LIQUID CRYSTAL	

6-3. MECHANISM SECTION (1)
(MG-36SZ7-32)

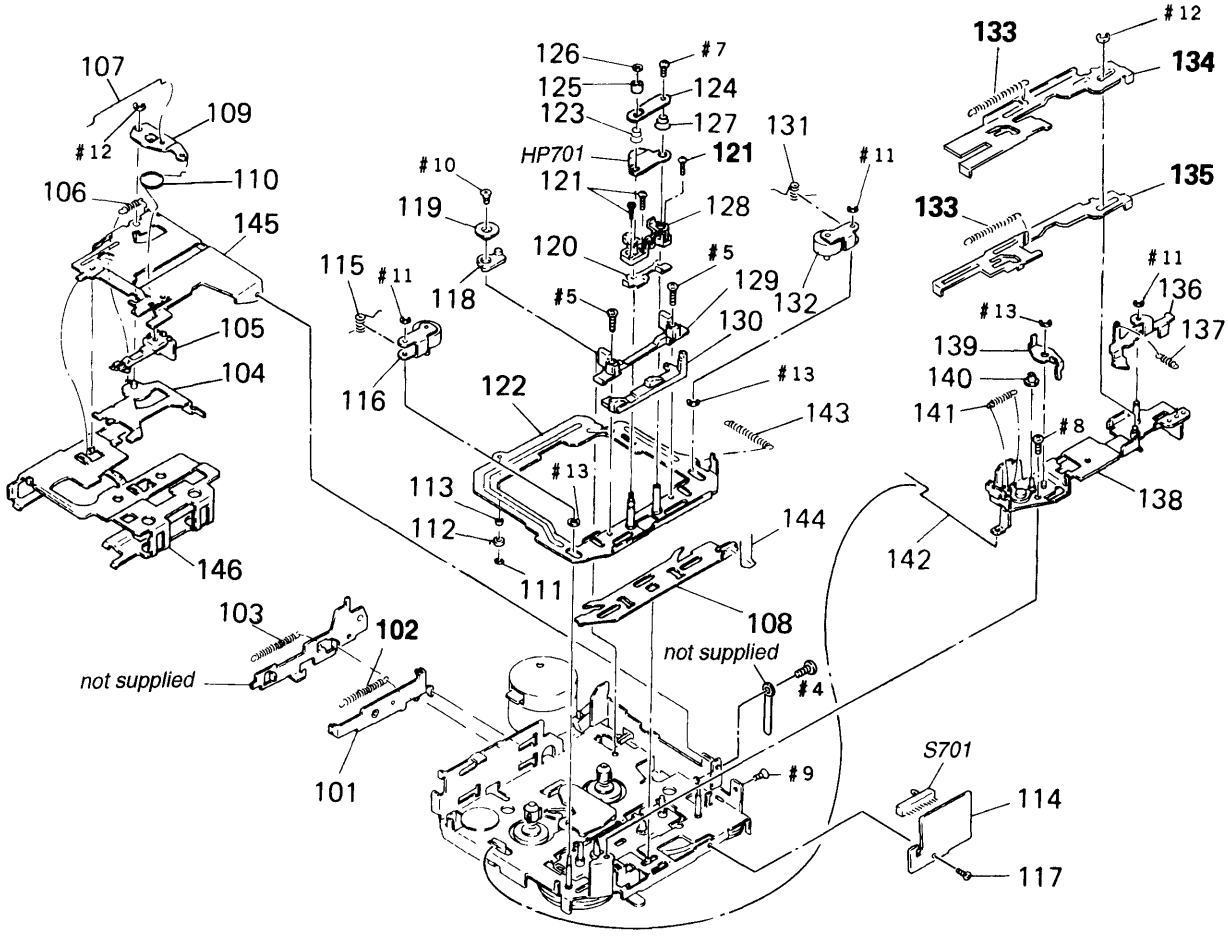

Ref. No.	Part No.	Description	Remark
101	3-938-660-01	LEVER, EJECT	
102	3-392-950-01	SPRING	
103	3-392-951-01	SPRING	
* 104	3-392-921-01	LOCK ASSY, EJECT CAM	
105	3-392-972-01	HOOKER, TAPE	
106	3-392-953-01	SPRING	
107	3-392-969-01	LINK, RETURN	
* 108	3-392-919-01	ARM ASSY, F,R SELECTION	
* 109	3-392-932-01	PLATE, CENTER	
110	3-392-961-01	SPRING (B)	
111	3-570-615-00	POLY-WASHER (DIA.1.2)	
112	3-392-945-01	ROLLER (A), H.P	
113	3-392-942-01	ROLLER (B), H.P	
114	3-392-970-01	CHASSIS, SWITCH (DIRECTION SWITCH BOARD)	
115	3-392-958-01	SPRING (R)	
116	3-375-378-01	ARM (R) ASSY, PINCH	
* 117	4-908-792-11	SCREW (B2)	
118	3-372-244-01	ARM (N), MUTE	
* 119	3-397-427-01	COLLAR, MUTE ARM	
120	3-377-908-01	SHIM (X), ADJUSTOR	
121	3-375-379-01	SCREW, AZIMUTH	
* 122	3-392-975-05	PLATE ASSY (S), HEAD	
123	3-392-956-01	SPRING (A)	
* 124	3-392-930-01	RETAINER, SPRING	

Ref. No.	Part No.	Description	Remark
125	3-392-943-01	ROLLER, FF	
126	3-676-387-00	POLY-SLIDER (DIA.1.6)	
127	3-392-955-01	SPRING (A)	
* 128	3-379-142-01	ARM (B), ADJUSTOR	
129	3-392-984-02	GUIDE, TAPE	
130	3-377-909-02	LINK (X), ADJUSTOR	
131	3-392-957-01	SPRING (F)	
132	3-375-377-01	ARM (F) ASSY, PINCH	
133	3-392-948-01	SPRING	
134	3-938-658-01	LEVER, FF	
135	3-938-659-01	LEVER, REW	
* 136	3-392-935-01	ARM, LOCK	
137	3-392-917-01	SPRING	
* 138	3-372-242-01	BRACKET ASSY (D), LEVER	
* 139	3-392-933-01	LEVER (B), CHANGE	
140	3-392-994-01	ROLLER, PROGRAM	
141	3-392-954-01	SPRING	
142	3-372-243-01	LINK (B), SELECTOR	
143	3-392-952-01	SPRING	
144	3-392-962-01	SPRING	
145	3-375-383-01	HANGER (X), CASSETTE	
146	3-375-384-01	HOLDER (X), CASSETTE	
HP701	1-543-717-11	HEAD, MAGNETIC (PLAYBACK)	
S701	1-692-502-11	SWITCH, SLIDE (DIRECTION)	

6-4. MECHANISM SECTION (2)
(MG-36SZ7-32)

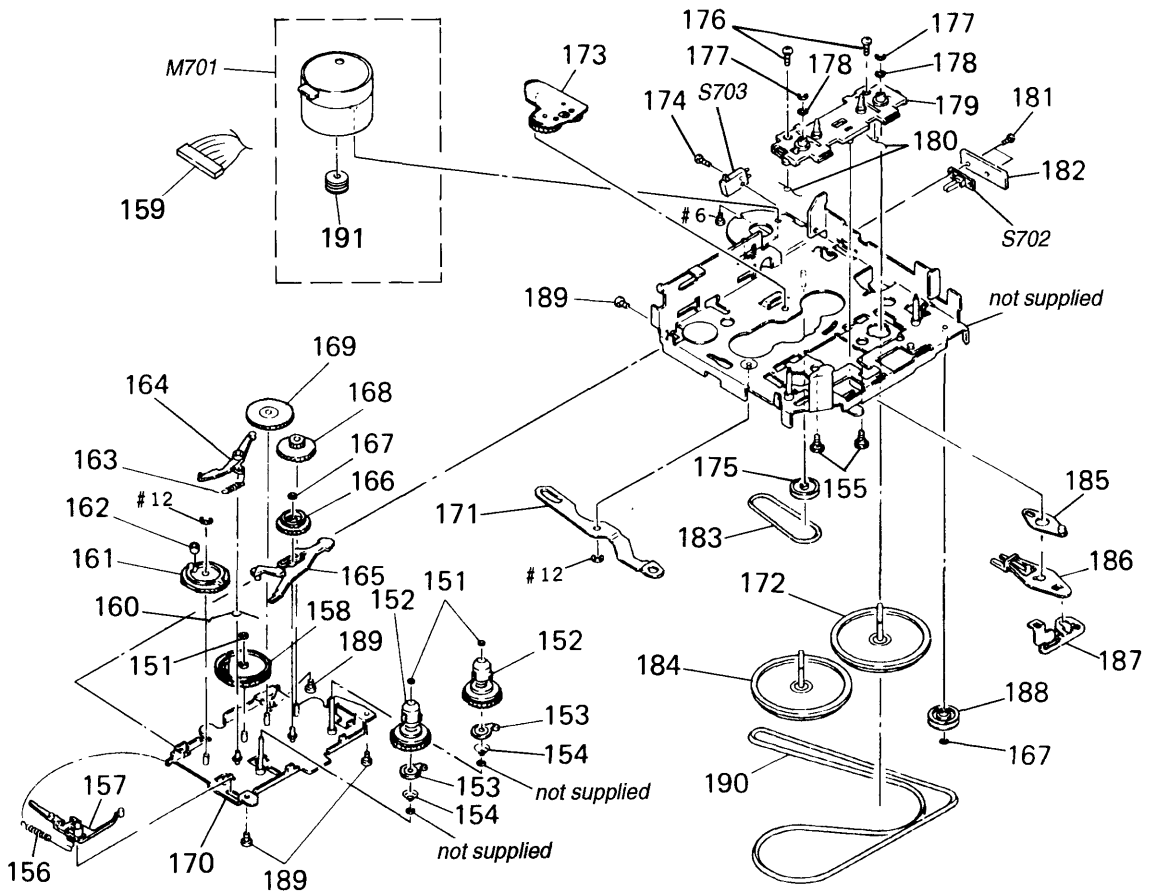

Ref. No.	Part No.	Description	Remark
151	3-676-387-00	POLY-SLIDER (DIA.1.6)	
152	3-376-196-01	SPINDLE ASSY (S), REEL	
153	3-375-380-01	CAM ASSY, DETECTION	
154	3-370-619-01	SPRING, BACK TENSION	
155	3-392-918-01	SCREW, EJECT HOOK	
156	3-392-959-01	SPRING	
157	3-392-985-02	RATCHET	
158	3-392-990-01	GEAR, DETECTION	
159	3-008-116-01	CORD ASSY, CONNECTOR	
160	3-392-960-01	SPRING	
161	3-392-987-01	GEAR, SELECTOR	
162	3-392-944-01	COLLAR (SELECTOR GEAR)	
163	3-375-131-01	SPRING, GEAR LOCK ARM	
164	3-392-989-02	ARM, GEAR LOCK	
165	3-392-986-01	ARM, SENSOR	
166	3-392-915-01	GEAR, IDLE	
167	3-570-615-00	POLY-WASHER (DIA.1.2)	
168	3-392-936-01	GEAR (A)	
169	3-392-937-01	GEAR (B)	
* 170	3-392-976-01	BASE ASSY, REEL	
* 171	3-392-979-01	LEVER, REVERSE	
172	3-392-926-02	FLYWHEEL ASSY (BF)	

Ref. No.	Part No.	Description	Remark
173	3-392-916-01	ARM ASSY, TU GEAR	
174	3-318-203-11	SCREW (B1.7X6), TAPPING	
175	3-392-938-01	GEAR, PULLY	
176	3-318-204-81	SCREW (M1.7X3), TAPPING	
177	3-590-768-00	RING (A), E	
178	3-701-437-11	POLY-SLIDER (A)	
* 179	3-375-381-01	BRACKET ASSY (X), CM	
180	3-392-963-01	SPRING (R)	
181	3-318-204-91	SCREW (M1.7X4), TAPPING	
182	3-375-376-01	MUTE (PWB) (MUTE SWITCH BOARD)	
183	3-375-375-02	BELT (C), SUB	
184	3-392-995-02	FLYWHEEL ASSY (BR)	
* 185	3-392-925-01	ARM (A) ASSY, F.R	
* 186	3-392-939-01	ARM, FF	
* 187	3-392-934-01	ARM (B), F.R	
188	3-392-941-01	PULLEY (A), IDLE	
* 189	4-908-792-11	SCREW (B2)	
190	3-392-967-01	BELT, MAIN	
* 191	3-392-913-01	PULLEY, MOTOR	
M701	X-3364-496-1	MOTOR ASSY (REEL/CAPSTAN)	
S702	1-692-065-11	SWITCH, LEAF (MUTE)	
S703	1-554-790-21	SWITCH, POWER (TAPE DET)	

KEY

SECTION 7
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : μ, for example:
  uA.. : μA.. uPA.. : μPA..
  uPB.. : μPB.. uPC.. : μPC.. uPD.. : μPD..
- CAPACITORS
  uF : μF
- COILS
  uH : μH

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
		KEY BOARD			
		**********			
*	3-937-557-01	PLATE (LCD), GROUND			
	3-937-558-01	HOLDER (LCD)			
*	3-937-559-01	PLATE (LCD), LIGHT GUIDE			
*	3-937-560-01	SHEET (REFLECTOR)			
		< CAPACITOR >			
C801	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C802	1-163-137-00	CERAMIC CHIP	680PF	5%	50V
		< DIODE >			
D801	8-719-025-31	DIODE 02CZ5.6-TE85L			
D802	8-719-025-31	DIODE 02CZ5.6-TE85L			
D803	8-719-025-31	DIODE 02CZ5.6-TE85L			
D804	8-719-025-31	DIODE 02CZ5.6-TE85L			
D805	8-719-043-82	DIODE 02CZ5.1Y-TE85L			
		< LIQUID CRYSTAL DISPLAY >			
H801	1-801-456-11	DISPLAY PANEL, LIQUID CRYSTAL			
		< IC >			
IC801	8-759-433-68	IC LC75842E			
		< JUMPER RESISTOR >			
J801	1-216-296-00	CONDUCTOR, CHIP		(3216)	
J802	1-216-296-00	CONDUCTOR, CHIP		(3216)	
J803	1-216-296-00	CONDUCTOR, CHIP		(3216)	
J807	1-216-296-00	CONDUCTOR, CHIP		(3216)	
		< CONNECTOR >			
P801	1-764-423-11	PIN, CONNECTOR 12P			
		< PILOT LAMP >			
PL801	1-517-626-11	LAMP, PILOT			
PL802	1-517-626-11	LAMP, PILOT			
PL803	1-517-626-11	LAMP, PILOT			
PL804	1-517-626-11	LAMP, PILOT			

Ref. No.	Part No.	Description			Remark
		< RESISTOR >			
R801	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R802	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R803	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R804	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R805	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R806	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R807	1-216-091-00	METAL CHIP	56K	5%	1/10W
R841	1-216-205-11	METAL GLAZE	2K	5%	1/8W
R842	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R844	1-216-075-00	METAL CHIP	12K	5%	1/10W
R845	1-216-076-00	METAL CHIP	13K	5%	1/10W
R846	1-216-056-00	METAL GLAZE	2K	5%	1/10W
R847	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R848	1-216-066-00	METAL CHIP	5.1K	5%	1/10W
R849	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R850	1-216-056-00	METAL GLAZE	2K	5%	1/10W
R851	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R852	1-216-066-00	METAL CHIP	5.1K	5%	1/10W
R853	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
		< SWITCH >			
SW801	1-554-813-41	SWITCH, KEY BOARD (OFF)			
SW802	1-554-813-41	SWITCH, KEY BOARD (6)			
SW805	1-554-813-41	SWITCH, KEY BOARD (3)			
SW806	1-554-813-41	SWITCH, KEY BOARD (2/DISC +)			
SW807	1-554-813-41	SWITCH, KEY BOARD (CD)			
SW808	1-554-813-41	SWITCH, KEY BOARD (SDK)			
SW809	1-554-813-41	SWITCH, KEY BOARD (+ ▶▶I (SEEK/AMS/MANU))			
SW810	1-554-813-41	SWITCH, KEY BOARD (1/DISC –)			
SW811	1-554-813-41	SWITCH, KEY BOARD (DSPL)			
SW812	1-554-813-41	SWITCH, KEY BOARD (FM/AM/A.MEM)			
SW813	1-554-813-41	SWITCH, KEY BOARD (– I◀◀ (SEEK/AMS/MANU))			
SW814	1-554-813-41	SWITCH, KEY BOARD (+)			
SW815	1-554-813-41	SWITCH, KEY BOARD (SEL)			
SW816	1-554-813-41	SWITCH, KEY BOARD (–)			
**********					

Ref. No.	Part No.	Description			Remark
*	A-3294-152-A	MAIN BOARD, COMPLETE			
		**********			
*	3-937-533-01	BRACKET (IC)			
	7-621-773-95	SCREW +B 2.6X6			
		< CAPACITOR >			
C201	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C202	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C203	1-124-443-00	ELECT	100uF	20%	10V
C204	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C205	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C206	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C208	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C209	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C251	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C252	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C253	1-136-495-11	FILM	0.068uF	5%	50V
C254	1-136-495-11	FILM	0.068uF	5%	50V
C255	1-126-163-11	ELECT	4.7uF	20%	50V
C256	1-136-287-11	FILM	0.0047uF	5%	100V
C257	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C258	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C259	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C260	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C261	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C262	1-126-157-11	ELECT	10uF	20%	16V
C303	1-163-139-00	CERAMIC CHIP	820PF	5%	50V
C304	1-163-139-00	CERAMIC CHIP	820PF	5%	50V
C305	1-126-514-11	ELECT	22uF	20%	16V
C306	1-126-514-11	ELECT	22uF	20%	16V
C307	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C308	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C309	1-126-157-11	ELECT	10uF	20%	16V
C401	1-124-257-00	ELECT	2.2uF	20%	50V
C402	1-124-257-00	ELECT	2.2uF	20%	50V
C403	1-126-157-11	ELECT	10uF	20%	16V
C404	1-126-157-11	ELECT	10uF	20%	16V
C405	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C406	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C407	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C408	1-124-257-00	ELECT	2.2uF	20%	50V
C409	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C410	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C411	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C412	1-124-257-00	ELECT	2.2uF	20%	50V
C413	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C414	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C415	1-126-163-11	ELECT	4.7uF	20%	50V
C416	1-126-163-11	ELECT	4.7uF	20%	50V
C451	1-126-163-11	ELECT	4.7uF	20%	50V
C452	1-126-163-11	ELECT	4.7uF	20%	50V
C483	1-126-791-11	ELECT	10uF	20%	16V
C484	1-126-791-11	ELECT	10uF	20%	16V
C501	1-126-163-11	ELECT	4.7uF	20%	50V
C502	1-126-163-11	ELECT	4.7uF	20%	50V
C503	1-126-163-11	ELECT	4.7uF	20%	50V
C504	1-126-163-11	ELECT	4.7uF	20%	50V
C509	1-126-791-11	ELECT	10uF	20%	16V
C510	1-126-791-11	ELECT	10uF	20%	16V
C512	1-124-556-11	ELECT	2200uF	20%	16V
C521	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C522	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C523	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C524	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C525	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C526	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C527	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C528	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C529	1-126-163-11	ELECT	4.7uF	20%	50V
C541	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C542	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C601	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C602	1-125-701-11	DOUBLELAYERS	0.047F		5.5V
C603	1-124-584-00	ELECT	100uF	20%	10V
C621	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C622	1-164-162-11	CERAMIC CHIP	100PF	5%	100V
C623	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C701	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C703	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C704	1-126-163-11	ELECT	4.7uF	20%	50V
C705	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C706	1-126-157-11	ELECT	10uF	20%	16V
C707	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C708	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C709	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C710	1-126-157-11	ELECT	10uF	20%	16V
C711	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C712	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C713	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C714	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C771	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
		< DIODE >			
D301	8-719-982-09	DIODE MTZJ-4.3			
D501	8-719-970-02	DIODE 1SR139-400			
D601	8-719-109-89	DIODE RD5.6ESB2			
D602	8-719-110-14	DIODE RD9.1ES-B3			

MAIN

Ref. No.	Part No.	Description	Remark
D604	8-719-110-08	DIODE RD8.2ES-B2	
D606	8-719-991-33	DIODE 1SS133T-77	
D607	8-719-061-04	DIODE 1SS145T-77	
D621	8-719-061-04	DIODE 1SS145T-77	
D622	8-719-061-05	DIODE 1N5401(N)	
D711	8-719-109-93	DIODE RD6.2ESB2	
D712	8-719-109-93	DIODE RD6.2ESB2	
D713	8-719-109-93	DIODE RD6.2ESB2	
D714	8-719-109-93	DIODE RD6.2ESB2	
D715	8-719-109-93	DIODE RD6.2ESB2	
D716	8-719-109-93	DIODE RD6.2ESB2	
D717	8-719-109-93	DIODE RD6.2ESB2	
D718	8-719-109-93	DIODE RD6.2ESB2	
D719	8-719-109-93	DIODE RD6.2ESB2	
D771	8-719-109-93	DIODE RD6.2ESB2	
D773	8-719-109-93	DIODE RD6.2ESB2	
D774	8-719-109-93	DIODE RD6.2ESB2	
D775	8-719-109-93	DIODE RD6.2ESB2	
D776	8-719-109-93	DIODE RD6.2ESB2	
		< TUNER >	
ET201	A-3294-179-A	TUNER ASSY	
		< VIBRATOR >	
F701	1-578-785-11	VIBRATOR, CRYSTAL (4.5MHz)	
		< FUSE >	
F901	1-533-330-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
		< IC >	
IC251	8-759-998-24	IC TDA1579T	
IC301	8-759-106-02	IC uPC4570G2	
IC401	8-759-161-19	IC TDA7314S	
IC451	8-759-076-15	IC KIA4558P	
IC481	8-759-208-08	IC TC4052BPHB	
IC501	8-759-369-42	IC HA13153	
IC701	8-759-437-26	IC LC72356-9241	
IC771	8-759-096-16	IC MM1175XF-T1	
		< COIL >	
L251	1-409-768-11	COIL (FILTER)	
L621	1-411-669-12	COIL, CHOKE	
L701	1-410-513-11	INDUCTOR 22uH	
		< CONNECTOR >	
* P301	1-506-993-11	PIN, CONNECTOR (PC BOARD) 11P	
P503	1-774-701-11	PIN, CONNECTOR 16P	
P701	1-764-422-11	PLUG, CONNECTOR 12P	

Ref. No.	Part No.	Description	Remark
		< JACK >	
PJ502	1-778-536-11	JACK, PIN 4P (BUS AUDIO IN, LINE OUT)	
PJ601	1-580-907-31	PLUG, CONNECTOR 8P (BUS CONTROL IN)	
		< TRANSISTOR >	
Q301	8-729-039-52	TRANSISTOR KTA1272OY-AT	
Q302	8-729-901-00	TRANSISTOR DTC124EK	
Q501	8-729-900-98	TRANSISTOR DTC143TK	
Q502	8-729-900-98	TRANSISTOR DTC143TK	
Q503	8-729-900-98	TRANSISTOR DTC143TK	
Q504	8-729-900-98	TRANSISTOR DTC143TK	
Q505	8-729-901-05	TRANSISTOR DTA124EK	
Q506	8-729-901-00	TRANSISTOR DTC124EK	
Q507	8-729-028-63	TRANSISTOR DTA115TKA-T146	
Q601	8-729-039-53	TRANSISTOR KTC3113B-AT	
Q602	8-729-039-83	TRANSISTOR 2SD1858-QR-TV2	
Q603	8-729-016-43	TRANSISTOR KTC3199Y-TP	
Q604	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q605	8-729-039-52	TRANSISTOR KTA1272OY-AT	
Q606	8-729-901-00	TRANSISTOR DTC124EK	
Q621	8-729-039-82	TRANSISTOR 2SB1326-QR-TV2	
Q622	8-729-901-00	TRANSISTOR DTC124EK	
Q701	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q702	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
		< RESISTOR >	
R201	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R202	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R204	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R205	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R206	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R207	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R208	1-216-079-00	METAL CHIP 18K 5% 1/10W	
R209	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R210	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R213	1-216-295-00	CONDUCTOR, CHIP (2012)	
R252	1-216-035-00	METAL CHIP 270 5% 1/10W	
R253	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R255	1-216-105-00	METAL GLAZE 220K 5% 1/10W	
R256	1-216-117-00	METAL CHIP 680K 5% 1/10W	
R258	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R259	1-216-093-00	METAL CHIP 68K 5% 1/10W	
R260	1-216-117-00	METAL CHIP 680K 5% 1/10W	
R261	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R262	1-216-085-00	METAL CHIP 33K 5% 1/10W	
R301	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R302	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R303	1-216-031-00	METAL CHIP 180 5% 1/10W	

Ref. No.	Part No.	Description			Remark
R304	1-216-031-00	METAL CHIP	180	5%	1/10W
R307	1-216-109-00	METAL CHIP	330K	5%	1/10W
R308	1-216-109-00	METAL CHIP	330K	5%	1/10W
R309	1-216-077-00	METAL CHIP	15K	5%	1/10W
R310	1-216-077-00	METAL CHIP	15K	5%	1/10W
R311	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R321	1-216-081-00	METAL CHIP	22K	5%	1/10W
R322	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R323	1-216-077-00	METAL CHIP	15K	5%	1/10W
R324	1-216-081-00	METAL CHIP	22K	5%	1/10W
R325	1-216-077-00	METAL CHIP	15K	5%	1/10W
R326	1-216-081-00	METAL CHIP	22K	5%	1/10W
R403	1-216-073-00	METAL CHIP	10K	5%	1/10W
R404	1-216-073-00	METAL CHIP	10K	5%	1/10W
R405	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R407	1-216-037-00	METAL CHIP	330	5%	1/10W
R408	1-216-037-00	METAL CHIP	330	5%	1/10W
R410	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R411	1-216-081-00	METAL CHIP	22K	5%	1/10W
R412	1-216-081-00	METAL CHIP	22K	5%	1/10W
R413	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R451	1-216-077-00	METAL CHIP	15K	5%	1/10W
R452	1-216-077-00	METAL CHIP	15K	5%	1/10W
R453	1-216-083-00	METAL CHIP	27K	5%	1/10W
R454	1-216-083-00	METAL CHIP	27K	5%	1/10W
R481	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R482	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R485	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R486	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R487	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R488	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R489	1-216-085-00	METAL CHIP	33K	5%	1/10W
R490	1-216-085-00	METAL CHIP	33K	5%	1/10W
R491	1-216-085-00	METAL CHIP	33K	5%	1/10W
R492	1-216-085-00	METAL CHIP	33K	5%	1/10W
R493	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R494	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R501	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R502	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R503	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R504	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R505	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R506	1-216-079-00	METAL CHIP	18K	5%	1/10W
R507	1-216-081-00	METAL CHIP	22K	5%	1/10W
R508	1-216-073-00	METAL CHIP	10K	5%	1/10W
R509	1-216-079-00	METAL CHIP	18K	5%	1/10W
R510	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R511	1-216-073-00	METAL CHIP	10K	5%	1/10W
R512	1-216-081-00	METAL CHIP	22K	5%	1/10W
R513	1-216-081-00	METAL CHIP	22K	5%	1/10W
R514	1-216-073-00	METAL CHIP	10K	5%	1/10W
R523	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R524	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R541	1-216-113-00	METAL CHIP	470K	5%	1/10W
R542	1-216-121-00	METAL GLAZE	1M	5%	1/10W
R543	1-216-121-00	METAL GLAZE	1M	5%	1/10W
R544	1-216-113-00	METAL CHIP	470K	5%	1/10W
R545	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R601	1-216-025-00	METAL GLAZE	100	5%	1/10W
R602	1-216-085-00	METAL CHIP	33K	5%	1/10W
R603	1-216-041-00	METAL CHIP	470	5%	1/10W
R604	1-216-043-00	METAL GLAZE	560	5%	1/10W
R605	1-216-073-00	METAL CHIP	10K	5%	1/10W
R606	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R609	1-216-081-00	METAL CHIP	22K	5%	1/10W
R610	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R613	1-216-073-00	METAL CHIP	10K	5%	1/10W
R621	1-216-081-00	METAL CHIP	22K	5%	1/10W
R622	1-247-232-11	CARBON	470	5%	1/2W
R701	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R702	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R703	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R705	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R706	1-216-085-00	METAL CHIP	33K	5%	1/10W
R707	1-216-085-00	METAL CHIP	33K	5%	1/10W
R708	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R709	1-216-075-00	METAL CHIP	12K	5%	1/10W
R710	1-216-081-00	METAL CHIP	22K	5%	1/10W
R711	1-216-081-00	METAL CHIP	22K	5%	1/10W
R712	1-216-081-00	METAL CHIP	22K	5%	1/10W
R713	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R714	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R715	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R716	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R717	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R718	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R719	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R720	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R721	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R722	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R725	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R726	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R727	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R731	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R732	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R733	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R734	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R735	1-216-049-11	METAL GLAZE	1K	5%	1/10W

MAIN | SWITCH

Ref. No.	Part No.	Description			Remark
R736	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R737	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R738	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R739	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R740	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R771	1-216-073-00	METAL CHIP	10K	5%	1/10W
R772	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R773	1-216-001-00	METAL CHIP	10	5%	1/10W
R774	1-216-001-00	METAL CHIP	10	5%	1/10W
R775	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R776	1-216-073-00	METAL CHIP	10K	5%	1/10W
		< VARIABLE RESISTOR >			
R251	1-228-989-00	RES, ADJ, METAL	470		
R257	1-228-997-00	RES, ADJ, METAL	100K		
		< SWITCH >			
SW703	1-554-088-00	SWITCH, KEY BOARD (RESET)			
		< THERMISTOR >			
TH621	1-809-148-11	THERMISTOR PTH8L07AR2R0M1B510			

****

SWITCH BOARD
****

< RESISTOR >

R943	1-216-066-00	METAL CHIP	5.1K	5%	1/10W

< SWITCH >

SW903	1-554-813-41	SWITCH, KEY BOARD (5)
SW904	1-554-813-41	SWITCH, KEY BOARD (4)

****

MISCELLANEOUS
****

1	1-777-898-11	CORD (WITH CONNECTOR) (POWER)
F901	1-533-330-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A
HP701	1-543-717-11	HEAD, MAGNETIC (PLAYBACK)
M701	X-3364-496-1	MOTOR ASSY (REEL/CAPSTAN)
S701	1-692-502-11	SWITCH, SLIDE (DIRECTION)
S702	1-692-065-11	SWITCH, LEAF (MUTE)
S703	1-554-790-21	SWITCH, POWER (TAPE DET)

****

Ref. No.	Part No.	Description	Remark
		ACCESSORIES & PACKING MATERIALS	
		**********	
	3-856-658-31	MANUAL, INSTRUCTION (ENGLISH,FRENCH, GERMAN,ITALIAN)	
	3-856-659-31	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH,GERMAN,ITALIAN)	
	X-3372-303-1	CASE ASSY	

****

****
HARDWARE LIST
****

#1	7-621-773-95	SCREW +B 2.6X6
#2	7-621-775-10	SCREW +B 2.6X4
#3	7-685-547-19	SCREW +BTP 3X10 TYPE2 N-S
#4	7-621-775-08	SCREW +P 2.6X3
#5	7-627-553-88	SCREW, PRECISION +P 2X7
#6	7-621-255-15	SCREW +P 2X3
#7	7-621-255-20	SCREW +P 2X4
#8	7-621-255-25	SCREW +PTT 2X4 (S)
#9	7-621-555-10	SCREW +K 2X3
#10	7-621-591-00	SCREW +K 2X4
#11	7-624-102-04	STOP RING 1.5, TYPE -E
#12	7-624-104-04	STOP RING 2.0, TYPE -E
#13	7-624-118-01	RING, RETAINING E-2.5

****

PARTS FOR INSTALLATION AND CONNECTIONS
****

201	X-3368-734-1	FRAME ASSY, FITTING
202	X-3372-372-1	SCREW ASSY
203	1-777-898-11	CORD (WITH CONNECTOR) (POWER)
204	1-575-616-21	CORD (WITH TERMINAL) (CHASSIS EARTH)

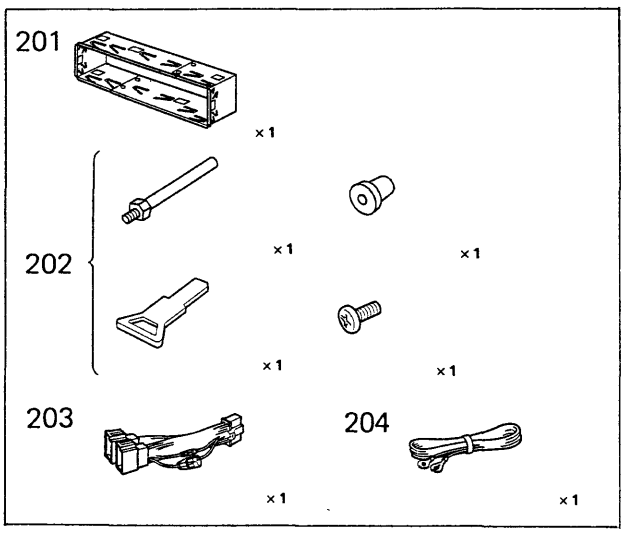

©1996. 9

XR-C102

SONY

German Model

SERVICE MANUAL

CORRECTION-1

Correct your service manual as shown below.

☛ : **indicates corrected portion.**

<table>
<tr><th>Page</th><th>INCORRECT</th><th>CORRECT</th></tr>
<tr><td>28</td><td> 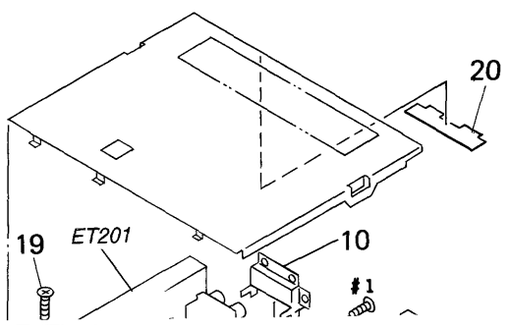
</td><td> 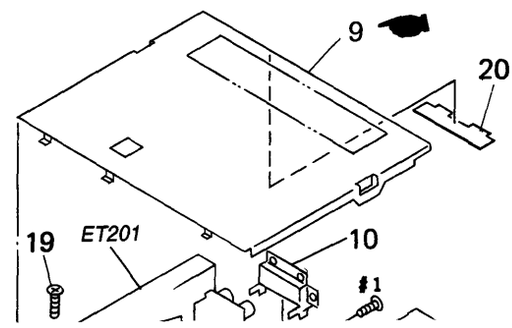
</td></tr>
<tr><td>29</td><td> 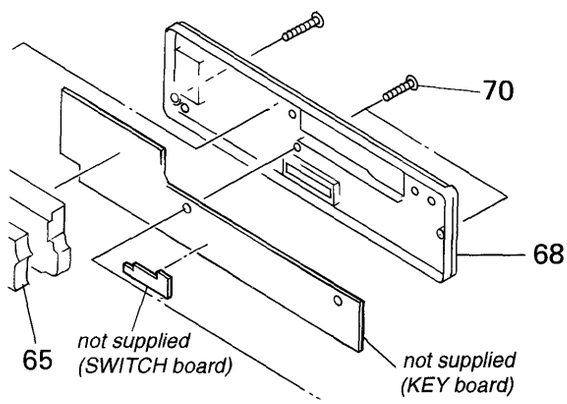

Ref. No. Part No. Description Remark
* 60 3-937-556-01 PLATE, LIGHT GUIDE
69 ————</td><td> 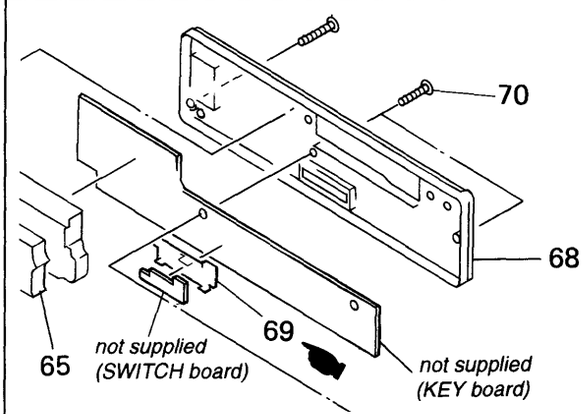

Part No. Description Remark
* 3-939-881-01 PLATE (BUTTON), LIGHT GUIDE ☛
* 3-009-000-01 HOLDER (SWITCH PC BOARD) ☛</td></tr>
</table>

9-923-589-91

Sony Corporation
Personal & Mobile Communication Company

96L0439-1D
Printed in Japan ©1996. 12
Published by Quality Assurance Dept.